
Instruction Manual

Drystar® GV80 Dry Vacuum Pumps

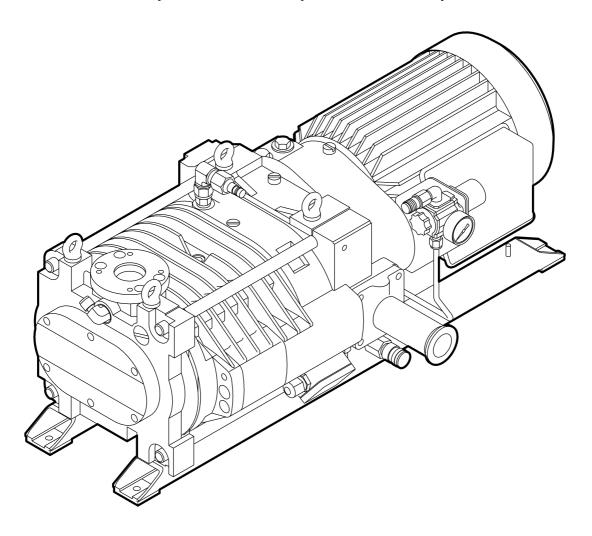

Description	Electrical Supply	Item Number
GV80 Dry Vacuum Pump	380/415 V, 50 Hz	NR8030000
GV80 Dry Vacuum Pump	230/460 V, 60 Hz	NR8031000
GV80 Dry Vacuum Pump	380 V, 60 Hz	NR8032000
GV80 Dry Vacuum Pump	200 V, 50 Hz	NR8033000
GV80 Dry Vacuum Pump	200 V, 60 Hz	NR8034000
GV80F Dry Vacuum Pump	380/415 V, 50 Hz	NR8035000
GV80F Dry Vacuum Pump	230/460 V, 60 Hz	NR8036000
GV80F Dry Vacuum Pump	380 V, 60 Hz	NR8037000
GV80F Dry Vacuum Pump	200 V, 50 Hz	NR8038000
GV80F Dry Vacuum Pump	200 V, 60 Hz	NR8039000

Original Instructions





Declaration of Conformity

Edwards Ltd, Innovation Drive, Burgess Hill, West Sussex, RH15 9TW, UK

The following product

Drystar GV80 Dry Vacuum Pumps

NR8030000, NR8031000, NR8032000, NR8033000, NR8034000, NR8035000, NR8036000, NR8037000, NR8038000, NR8039000

Is in conformity with the relevant requirements of European CE legislation:

2006/42/EC Machinery directive

2014/35/EU Low voltage directive (LVD)

2011/65/EU Restriction of certain hazardous substances (RoHS) directive

2009/125/EC Ecodesign directive, following the requirements of

Regulation (EC) No. 640/2009 (as amended)

Based on the relevant requirements of harmonised standards:

EN 1012-2:1996 Compressors and vacuum pumps. Safety requirements. Vacuum pumps

+A1:2009

EN 60034-1:2010 Rotating electrical machines. Rating and performance

EN 60034-30-1:2014 Rotating electrical machines. Efficiency classes of line operated AC motors

(IE code)

This covers all product serial numbers from the date of this declaration onwards.

06.12.2018, Lutin

Nick Evans
General Manager

Date and Place

06.12.2018, Burgess Hill

Andries Desiron Date and Place
Vice President Engineering

Material Declaration

In accordance with the requirements of the Chinese regulatory requirement on the Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products Order No. 32 (also known as 'China RoHS2') and SJ/T 11364 Marking for the Restricted Use of Hazardous Substances in Electronic and Electrical Products:

Product Labels

Product	Product Label	Meaning
All pumps in the list below	20	This product contains hazardous substances in at least one of the homogeneous materials used which are above the limit requirement in GB/T 26572 as detailed in the declaration table below. These parts can safely be used for the environmental protection use period as indicated.

Pump Type	Pump Size
GV pump	GV80
Stokes	607, 615, 61B, 622
Microvac	212J, 412J
IDX, CDX	IDX1000, IDX1300, CDX1000
EDP Pumps	EDP80, 160, 250, 300, 400

材料成分声明 Materials Content Declaration

		危险物质 Hazardous Substances				
部件名称 Part name	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr VI)	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
铸铝 Cast Aluminium	Х	0	0	0	0	0
铜管管件 Brass pipe Fittings	Х	0	0	0	0	0
铜接头 Brass Connectors	Х	0	0	0	0	0


- O:表示该有害物质在该部件的所有均质材料中的含量低于 GB/T 26572 标准规定的限量要求。
- O: Indicates that the hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.
- X:表示该有害物质在该部件的至少一种均质材料中的含量超出 GB/T26572 标准规定的限量要求。
- X: Indicates that the hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.

NOTES: These products are EU RoHS compliant, the following Exemptions apply:

- 6(b) Lead as an alloying element in aluminium containing up to 0.4% by weight.
- 6(c) Copper alloy containing up to 4% lead by weight

Packaging Information

Pallet	Over-shipper	Protection Pieces	Support Braces
NW	€ CB	5 PP	FE
Recyclable Natural Wood	Recyclable Cardboard	Recyclable Polypropylene	Recyclable Mild Steel

 



Contents

1 Introduction 1 1.1 Scope and definitions 1 1.2 The GV pumps 1 1.4 Cooling system 2 1.5 Motor over-temperature protection 4 1.6 Liquid pumping capability 4 1.7 Safe area operation 4 1.8 Accessories 4 2 Technical data 5 2.1 General 5 2.2 Materials of construction 5 2.3 Services 8 2.4 Cooling system 6 2.5 Lubrication system 6 2.5 Lubrication system 6 2.5 Gearbox 5 2.5 High accumb earings 5 2.6 Area classification in accordance with BS 5345 5 3 Installation 11 3.1 Safety 1 3.2 Unpack and inspect 1 3.3 Locate the pump <t< th=""><th>Section</th><th>on</th><th>Page</th></t<>	Section	on	Page
1.2 The GV pumps 1.3 1.3 Gas system 2.6 1.5 Motor over-temperature protection 4.6 1.6 Liquid pumping capability 4.7 1.7 Safe area operation 4.8 1.8 Accessories 4.8 2 Technical data 5.7 2.1 General 5.7 2.2 Materials of construction 5.7 2.3 Services 5.7 2.4 Cooling system 5.7 2.5 Lubrication system 5.7 2.5 1.0 Lubrication system 5.7 2.5 1.0 Lubrication system 5.7 2.5 2.5 High vacuum bearings 5.7 2.6 Area classification in accordance with BS 5345 5.8 3 Installation 11 3.1 Safety 11 3.2 Unpack and inspect 11 3.1 Safety 11 3.2 Unpack and inspect 11 3.3 Locate the pump 12	1	Introduction	1
2.1 General 5 2.2 Materials of construction 5 2.3 Services 8 2.4 Cooling system 9 2.5 Lubrication system 9 2.5.1 Gearbox 9 2.5.2 High vacuum bearings 9 2.6 Area classification in accordance with BS 5345 9 3 Installation 11 3.1 Safety 11 3.2 Unpack and inspect 11 3.3 Locate the pump 11 3.4 Check the gearbox oil-level 12 3.5 Electrical connections 12 3.5 Electrical connections 12 3.5 Introduction 14 3.5.2 Connect to the pump-motor terminal-box 14 3.5.1 Introduction 14 3.6 Check the direction of pump protation 17 3.7 Fit a mechanical booster pump (optional) 17 3.8 Connect the cooling-water supply 17 3.9 Connect the shaft-seals purge and gas-ballast ga	1.2 1.3 1.4 1.5 1.6 1.7	The GV pumps Gas system Cooling system Motor over-temperature protection Liquid pumping capability Safe area operation	
2.2 Materials of construction 5 2.3 Services 6 2.4 Cooling system 6 2.5.1 Gearbox 5 2.5.2 High vacuum bearings 5 2.6 Area classification in accordance with BS 5345 5 3 Installation 11 3.1 Safety 11 3.2 Unpack and inspect 11 3.3 Locate the pump 12 3.4 Check the gearbox oil-level 12 3.5 Electrical connections 12 3.5.1 Introduction 14 3.5.2 Connect to the pump-motor terminal-box 14 3.6 Check the direction of pump rotation 13 3.6 Check the direction of pump rotation 13 3.7 Fit a mechanical booster pump (potional) 17 3.8 Connect the cooling-water supply 17 3.9 Connect the shaft-seals purge and gas-ballast gas supplies 18 3.9.1 Introduction 18 3.9.2 Connect the pump-inlet and pump-outlet 18 </td <td>2</td> <td>Technical data</td> <td>5</td>	2	Technical data	5
3.1 Safety 11 3.2 Unpack and inspect 11 3.3 Locate the pump 12 3.4 Check the gearbox oil-level 12 3.5 Electrical connections 12 3.5.1 Introduction 14 3.5.2 Connect to the pump-motor terminal-box 14 3.5.3 Connect to the thermal snap-switches 15 3.6 Check the direction of pump rotation 17 3.7 Fit a mechanical booster pump (optional) 17 3.7 Fit a mechanical booster pump (optional) 17 3.9 Connect the cooling-water supply 17 3.9 Connect the shaft-seals purge and gas-ballast gas supplies 18 3.9.1 Introduction 18 3.9.2 Connect the shaft-seals purge air or nitrogen supply 18 3.10 Connect the pump-inlet and pump-outlet 18 3.10.2 Connect the pump to your process system 15 3.10.2 Connect the pump to your process system 15 3.11 Leak test the installation 26 3.12 Commission the pump <td>2.2 2.3 2.4 2.5 2.5.1 2.5.2</td> <td>Materials of construction Services Cooling system Lubrication system Gearbox High vacuum bearings</td> <td></td>	2.2 2.3 2.4 2.5 2.5.1 2.5.2	Materials of construction Services Cooling system Lubrication system Gearbox High vacuum bearings	
3.2 Unpack and inspect 11 3.3 Locate the pump 12 3.4 Check the gearbox oil-level 12 3.5 Electrical connections 12 3.5.1 Introduction 14 3.5.2 Connect to the pump-motor terminal-box 14 3.5.3 Connect to the thermal snap-switches 15 3.6 Check the direction of pump rotation 17 3.7 Fit a mechanical booster pump (optional) 17 3.8 Connect the cooling-water supply 17 3.9 Connect the shaft-seals purge and gas-ballast gas supplies 16 3.9.1 Introduction 18 3.9.2 Connect the shaft-seals purge air or nitrogen supply 18 3.10 Connect the pump-inlet and pump-outlet 18 3.10.1 Connect the pump to your process system 15 3.10.2 Connect the pump-outlet 15 3.11 Leak test the installation 26 3.12 Commission the pump 21 4 Operation 21 4 Operation 22 <td< td=""><td>3</td><td>Installation</td><td>11</td></td<>	3	Installation	11
4.1 Start the pump	3.2 3.3 3.4 3.5 3.5.1 3.5.2 3.5.3 3.6 3.7 3.8 3.9 3.9.1 3.9.2 3.10 3.10.1 3.10.2 3.11 3.12	Unpack and inspect Locate the pump Check the gearbox oil-level Electrical connections Introduction Connect to the pump-motor terminal-box Connect to the thermal snap-switches Check the direction of pump rotation Fit a mechanical booster pump (optional) Connect the cooling-water supply Connect the shaft-seals purge and gas-ballast gas supplies Introduction Connect the shaft-seals purge air or nitrogen supply Connect the pump-inlet and pump-outlet Connect the pump to your process system Connect the pump-outlet Leak test the installation Commission the pump	
4.2 Check the purge pressures and flows 22 4.3 Shut down the pump 22 5 Maintenance 23 5.1 Safety 23 5.2 Maintenance plan 24		·	
5.1 Safety 23 5.2 Maintenance plan 24	4.2	Check the purge pressures and flows	22
5.2 Maintenance plan	5	Maintenance	23
	5.2	Maintenance plan	24

Contents

5.4	Inspect the gas-ballast system	25
5.5	Inspect the pipelines and connections	
5.6	Change the gearbox oil and clean the oil-level sight-glass	
5.7	Relubricate the high vacuum bearings	
5.8	Flush the cooling jacket	
5.9	Replace the gas-ballast filter	
5.10	Replace the pump-motor bearings	
5.11	Overhaul the pump	
5.12	Fault finding	
6	Storage and disposal	33
6.1	Storage	33
6.2	Disposal	
7	Service, spares and accessories	35
7.1	Introduction	35
7.2	Service	
7.3	Spares and maintenance kits	
7.4	Accessories	
7.4.1	Exhaust silencer	
7.4.2	Booster connection kit	
7.4.3	Acoustic enclosure	

For return of equipment, complete the HS Forms at the end of this manual. $\label{eq:heaviside}$

Illustrations

Figu	ıre	Page
1	The GV pump	
2	Dimensions	
3	Schematic diagram of the recommended electrical connections	
4	Connect to the thermal snap-switches	
5	Oil-level sight-glass and oil filler-port	
6	Relubricate the high vacuum bearings	

Tables

Table		Page
1	General technical data	5
2	Materials of construction	5
3	Technical data: 200/220-240/380/400/415 V, 50 Hz electrical supplies	<i>6</i>
4	Technical data: 200/230/460 V, 60 Hz electrical supplies	<i>6</i>
5	Pump services	
6	Electrical data	
7	Cooling system	
8	Checklist of components	
9	Maintenance plan	24
10	Fault finding	
11	Spares and maintenance kits	35
12	Exhaust silencer	



13	Booster connection kit	3
14	Acoustic enclosure	3

Associated publications

Publication title

Publication number

Vacuum pump and vacuum system safety

P400-40-100

Trademark credits

Edwards and the Edwards logo are trademarks of Edwards Limited, Innovation Drive, Burgess Hill, West Sussex, RH15 9TW, UK.

Fomblin® is a registered trademark of Ausimont SpA.

LET-LOK® is a registered trademark of HAM-LET Group.

Swagelok™ is trademark of Crawford Fitting Company.

Viton™ is trademark of DuPont Dow Elastomers L.L.C.



This page has been intentionally left blank.



1 Introduction

1.1 Scope and definitions

This manual provides installation, operation and maintenance instructions for the Edwards GV80 Dry Vacuum Pump (abbreviated to GV pump in the remainder of this manual). You must use the GV pump as specified in the manual.

Read this manual before you install and operate the GV pump. Important safety information is highlighted as WARNING and CAUTION instructions; you must obey these instructions. The use of WARNINGS and CAUTIONS is defined below.



WARNING

Warnings are given where failure to observe the instruction could result in injury or death to people.

CAUTION

Cautions are given where failure to observe the instruction could result in damage to the equipment, associated equipment and process.

The following IEC warning labels appear on the pump:



Warning - refer to accompanying documentation.



Warning - risk of electric shock.



Warning - hot surfaces.

The units used throughout this manual conform to the SI international system of units of measurement.

1.2 The GV pumps

The GV pumps are rugged, reliable dry vacuum pumps designed for general vacuum use

The pump is a three-stage, positive displacement rotary pump in which pairs of intermeshing rotors (mounted on common shafts) are held in correct phase relation by a pair of timing-gears. The timing-gears and the adjacent double-row angular contact ball-bearings are oil lubricated.

The pump has lifting-bolts refer to Figure 1 (12) and is mounted on a robust frame (8). Fixing holes (9) in the frame can be used to secure the pump frame in its operating position.



1.3 Gas system

The pump has a shaft-seals purge system and a gas-ballast system.


You can connect a dry compressed air supply to the shaft-seals purge inlet (4). The shaft-seals purge pipeline then delivers the dry air purge to the shaft-seals. This dry air purge: ensures that the shaft-seals are maintained at a positive pressure during pump operation; prevents the entry of corrosive or toxic process vapours into the pump gearbox; prevents contamination of the process gases by pump oil; prevents damage to the shaft-seals by debris.

As supplied, the gas-ballast system can deliver ambient air to the pump gas-ballast inlet. The air-flow is filtered and is controlled by a valve (14). A check-valve in the system prevents the escape of process gases out of the gas-ballast system into the local atmosphere.

If required for your application, you can connect dry nitrogen supplies to the pump, to deliver nitrogen gas-ballast and nitrogen shaft-seals purge instead of air: refer to Section 3.9.



Figure 1 - The GV pump

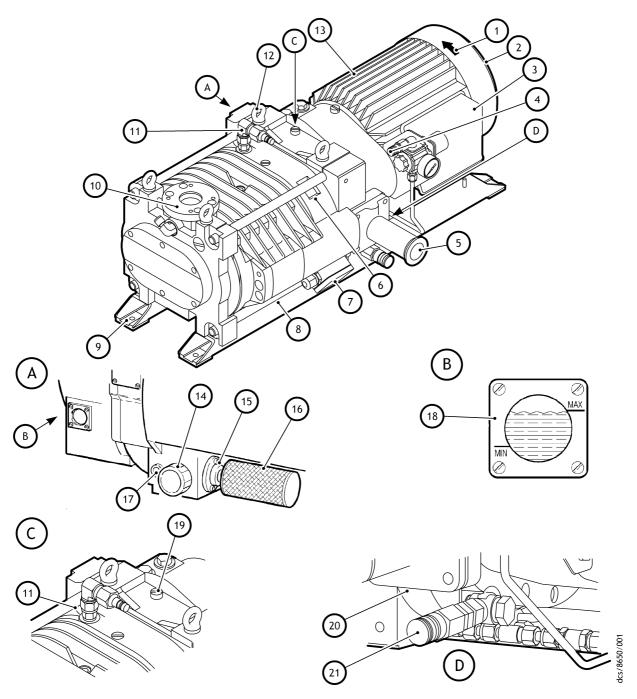

- 1. Direction of rotation arrow
- 2. Cooling-fan
- 3. Terminal-box
- 4. Shaft-seals purge inlet (quick connect)
- 5. Pump-outlet
- 6. Temperature measurement point
- 7. Thermal snap-switch box
- 8. Pump frame
- 9. Fixing hole
- 10. Pump-inlet
- 11. Cooling-water outlet (quick connect)

- 12. Lifting-bolts
- 13. Pump-motor
- 14. Gas-ballast flow valve gauge
- 15. Gas-ballast inlet pressure regulator
- 16. Air filter check valve
- 17. TCV probe port
- 18. Oil-level sight-glass
- 19. Air bleed plug
- 20. Outlet-flange O-ring
- 21. Cooling-water inlet (quick connect)



1.4 Cooling system

Note: The direct cooling system fitted to the pump is suitable for pump operating temperatures (measured at the position shown in Figure 1, item 6) of up to 45 °C, (113 °F). If your application requires pump operating temperatures of 45 to 90 °C (113 to 194 °F), we recommend that you fit an Indirect Cooling Kit accessory.

The pump has a direct cooling system, in which cooling-water (connected through the cooling-water inlet, 21) circulates around the pump-body and then passes out of the pump through the cooling-water outlet (11). The pump motor (13) is air-cooled by an integral cooling-fan (2).

The thermal snap-switch box (7) on the pump-body has two thermal snap-switches:

- The output of the warning thermal snap-switch will go open circuit when the temperature of the pump-body is higher than normal. Use this output to provide a warning of high pump temperature.
- The output of the shut-down thermal snap-switch will go open circuit when the temperature of the pump body is too high. Use this output to shut-down the pump when it is too hot.

1.5 Motor over-temperature protection

A motor-protection thermistor is fitted to the pump-motor. This thermistor is a solid-state device which has a low electrical resistance at normal pump-motor operational temperature. When the pump-motor is too hot, the electrical resistance of the thermistor rises quickly. You can connect the outputs of the thermistor to your control equipment to shut down the pump if the pump-motor is too hot.

1.6 Liquid pumping capability

The GV pump cannot survive the ingress of liquid (after a process failure condition, for example) without damage. If you want to pump liquids, contact your supplier or Edwards for advice.

1.7 Safe area operation

You must not use the GV pump in the following hazardous areas:

- Zone 0, Zone 1 or Zone 2 (gases), or Zone Z (10) or Zone Y (11) (dusts), as classified by European authorities.
- Division 1 or Division 2 (gases and dusts), as classified by North American authorities.

These hazardous areas require the use of flameproof equipment. If you need a pump which can operate in these areas, contact your supplier or Edwards for advice.

1.8 Accessories

A number of accessories are available for the GV pumps; use these to configure the pump for specific applications. These accessories are listed in Section 7.



2 Technical data

2.1 General

Table 1 - General technical data

Item	Reference data
Dimensions	Refer to Figure 2
Mass	Refer to Table 3 and 4
Pump-motor rating	Refer to Table 3 and 4
Full load and no-load current ratings	Refer to Table 6
Typical pump rotation speed	
50 Hz electrical supply	3000 rpm
60 Hz electrical supply	3600 rpm
Warm-up time to pump operating temperature of 40 °C (104 °F), with a cooling-water flow rate of 150 lh ⁻¹ (33 US gallons h ⁻¹)	15 min
Pump-inlet connection	ISO40
Pump-outlet connection	NW40
Recommended pump-inlet seal	Fluoroelastomer trapped O-ring
Recommended pump-outlet seal	Fluoroelastomer trapped O-ring
Ambient operating temperature range	0 to 40 °C, 32 to 104 °F
Maximum ambient operating humidity	100% RH
Maximum outlet pressure	1.3 bar absolute,1.3 x 10 ⁵ Pa, 975 Torr
Swept volume maximum pressure rating	11 bar absolute, 1.1 x 10 ⁶ Pa, 8250 Torr
Typical continuous A-weighted sound pressure level	Refer to Table 3 and 4
Performance	Refer to Table 3 and 4

2.2 Materials of construction

Table 2 - Materials of construction

Item	Reference data
Rotors	Grey cast iron, grade 250
Stators	Grey cast iron, grade 250
Shafts	Carbon steel 817 M40
Sleeves	Stainless steel 431 S29
Bearing holders	Stainless steel 410 C21
Inlet flange	Carbon steel
Outlet flange	Grey cast iron, grade 250
Gearbox	Grey cast iron, grade 250
Coupling cover	Grey cast iron, grade 250
O-rings	Fluoroelastomer
Shaft seals	Carbon filled PTFE (polytetrafluoroethylene)
Timing gears	Carbon steel 817 M40



Table 3 - Technical data: 200/220-240/380/400/415 V, 50 Hz electrical supplies

Characteristics	Units
Mass (with A07115096 electric motor, without silencer*)	157 kg/346.13 lb
Mass (with A07115098 electric motor, without silencer*)	167 kg/368.17 lb
Pump-electrical motor rating (A07115096)	4 kW/5.4 hp
Pump-electrical motor rating (A07115098)	4 kW/5.4 hp
Typical continuous A-weighted sound pressure level	< 78 dB (A)
Maximum pumping speed	82 m ³ h ⁻¹
Displacement (swept volume)	91.5 m ³ h ⁻¹
Ultimate vacuum	3 x 10 ⁻² mbar
	3 Pa
Typical heat removed from pump by cooling-water	1.1 kW
Maximum water consumption [†]	1 I.min ⁻¹

Mass of silencer is 6 kg/13.23 lb.

Table 4 - Technical data: 200/230/460 V, 60 Hz electrical supplies

Characteristics	Units
Mass (with A07115096 electric motor, without silencer*)	346.13 lb/157 kg
Mass (with A07115098 electric motor, without silencer*)	368.17 lb/167 kg
Pump-electrical motor rating (A07115096)	5.4/5 [†] hp, 4/3.7 [†] kW
Pump-electrical motor rating (A07115098)	5.4/5 [†] hp, 4/3.7 [†] kW
Typical continuous A-weighted sound pressure level	< 80 dB (A)
Maximum pumping speed	64.6 ft ³ min ⁻¹
Displacement (swept volume)	53.8 ft ³ min ⁻¹
Ultimate vacuum	2.25 x 10 ⁻² Torr
Typical heat removed from pump by cooling-water	3412 BTU
Maximum water consumption [‡]	17.5 US gallons h ⁻¹

Mass of silencer is 13.23 lb/6 kg.


Pump at typical operating temperature of 44 °C, at ultimate vacuum with a cooling-water supply temperature of 28 °C and an ambient temperature of 20 °C.


NEMA Premium Efficiency (NPE), equivalent to IE3 efficiency class.

Pump at typical operating temperature of 111 °F, at ultimate vacuum with a cooling-water supply temperature of 82 °F and an ambient temperature of 68 °F.



Figure 2 - Dimensions

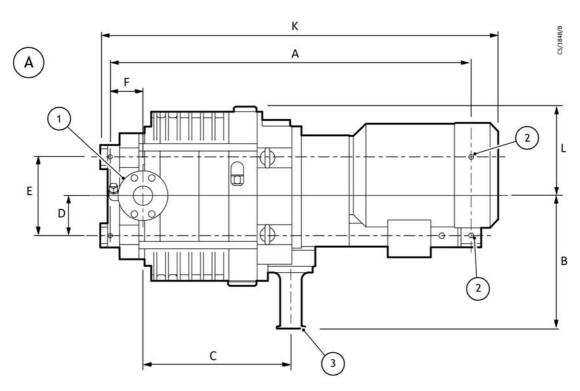

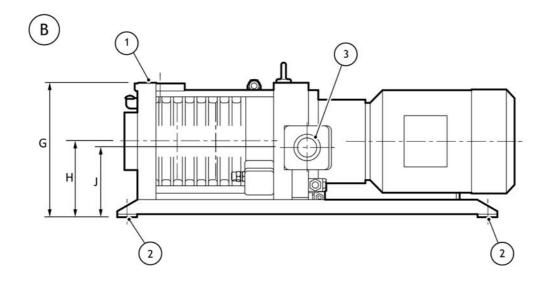

- A Top view
- B Side view
- 1. Pump-inlet
- 2. Fixing holes: $\varnothing 9$ mm, 0.35 inches
- 3. Pump-outlet

Electrical Supply	Units	Α	В	С	D	E	F	G	Н	J	K	L
50 Hz	mm	737	270	301	80	160	67	275	156	143	858	184
60 Hz	inches	29	10.63	11.85	3.15	6.30	2.64	10.83	6.14	5.63	33.78	7.24



2.3 Services

Table 5 - Pump services

Item	Reference data
Electrical supply	Refer to motor rating plate for voltage and wiring details
Cooling-water supply	
Supply temperature range	5 to 35 °C, 41 to 95 °F
Maximum supply pressure	8 bar absolute, 8 x 10 ⁵ Pa, 116 psi, 5.99 x 10 ³ Torr
Minimum required pressure differential across supply and return	2.1 bar absolute, 2.1 x 10 ⁵ Pa, 30 psi, 1.55 x 10 ³ Torr
Typical heat removed from pump	Refer to Table 3 and 4
Maximum water consumption	Refer to Table 3 and 4
Maximum particle size in supply	0.03 mm ² , 4.65 x 10 ⁻⁵ inch ²
Fittings type, suitable for	1/2 inch outside diameter rigid tube
Shaft-seals purge nitrogen supply	
Minimum supply pressure	0.3 bar gauge, 1.3 bar absolute, 4.35 psi gauge, 1.3 x 10 ⁵ Pa, 9.75 x 10 ² Torr
Maximum supply pressure	0.8 bar gauge, 1.8 bar absolute, 11.6 psi gauge, 1.8 x 10 ⁵ Pa, 1.35 x 10 ³ Torr
Maximum flow rate	25 lmin ⁻¹ , 0.88 ft ³ min ⁻¹
Fittings type, suitable for	1/4 inch outside diameter rigid tube

Table 6 - Electrical data

Electrical supply [V]	Frequency [Hz]	Efficiency class	Electrical motor item number	Power [hp]	Power [kW]
230	60	IE3/NPE [*]	A07115096	5.4/5*	4.00/3.7*
460	60	IE3/NPE*	A07115096	5.4/5*	4.00/3.7*
380/415	50	IE3	A07115096	5.4	4.00
400	50	IE3	A07115096	5.4	4.00
200	60	IE3/NPE*	A07115098	5.4/5*	4.00/3.7*
380	60	IE3/NPE*	A07115098	5.4/5*	4.00/3.7*
200	50	IE3	A07115098	5.4	4.00

NEMA Premium Efficiency (NPE), equivalent to IE3 efficiency class.



2.4 Cooling system

Table 7 - Cooling system

Item	Reference data
Cooling system type	Direct water-cooling
Cooling-water requirements	Refer to Section 2.3 and Table 3 and 4
Thermal snap-switches	
Warning thermal snap-switch	
Opening temperature	88 °C, 190 °F
Closing temperature	78 °C, 172 °F
Shut-down thermal snap-switch	
Opening temperature	95 °C, 203 °F
Closing temperature	85 °C, 185 °F
Contact ratings	
Maximum voltage	60 V d.c., 25 V a.c.
Maximum current (inductive load) [*]	0.2 A (d.c. voltage), 1 A (a.c. voltage)

Protective extra low voltage.

2.5 Lubrication system

Note: Edwards Material Safety Data Sheets for the recommended oil and grease referenced in the sections below are available on request.

2.5.1 Gearbox

Gearbox oil capacity 0.4 litres, 0.1 US gallons

Recommended oil * Mobil SHC 629 Antiwear Synthetic Gear Oil 150 cst

Note: In the PFPE versions the oil is:

Recommended PFPE oil Fomblin 25/6

2.5.2 High vacuum bearings

Grease type Perfluoropolyether
Recommended grease Fomblin RT15

2.6 Area classification in accordance with BS 5345

Standard pumps Safe Area designation only

^{*} The pump is supplied filled with this oil. Pump operating temperature is measured at the point shown in Figure 1, item 6. For pump operating temperatures higher than 45 °C (113 °F), we recommend that you fit an Indirect Cooling Kit.



This page has been intentionally left blank.



3 Installation

3.1 Safety



WARNING

Obey the safety instructions given below and take note of appropriate precautions. If you do not, you can cause injury to people and damage to equipment.

- A suitably trained and supervised technician must install your GV pump.
- Ensure that you comply with all local and national safety requirements when you install the pump. In the US, make the wiring connections to the pump-motor in accordance with the US National Electrical Code.
- Ensure that the installation technician is familiar with the safety procedures which relate to the products pumped. Wear the appropriate safety-clothing when you come into contact with contaminated components. Dismantle and clean contaminated components inside a fume-cupboard.
- Vent and purge the process system before you start installation work.
- Check that all the required components are available and of the correct type before you start.
- Disconnect the other components in the process system from the electrical supply so that they cannot be
 operated accidentally.
- Do not reuse O-rings if they are damaged.
- Ensure that you connect, disconnect and fully engage the quick connectors correctly.
- Ensure that the distance between electrical motor fan cover and the wall/obstacle in front of that cover is at least 25 mm (necessary for securing enough air flow through the electrical motor and its cooling).

3.2 Unpack and inspect



WARNING

Use suitable lifting-equipment to move the pump. Refer to Section 2 for the pump mass.

- 1. Use a fork-lift truck or a pallet truck to place the pallet in a convenient position.
- 2. Remove the cardboard sleeve which covers the pump, then remove the protective foil bag from around the pump.
- 3. Inspect the equipment. If the pump or any of the other items is damaged, notify your supplier and the carrier in writing within three days; state the Item Number of the pump together with your order number and your supplier's invoice number. Retain all packing materials for inspection. Do not use the pump if it is damaged.
- 4. Check that you have received the items listed in Table 8. If any of these items is missing, notify your supplier in writing within three days.
- 5. If the pump is not to be used immediately, replace the packing materials. Store the pump in suitable conditions as described in Section 6.



Table 8 - Checklist of components

Qty	Description	Check (✓)
1	GV pump	
Fittings kit, which contains:		
1	NW40 clamping ring	
1	NW40 trapped O-ring	

3.3 Locate the pump



WARNING

Use suitable lifting-equipment to move the pump. Refer to Section 2 for the mass of the pump.

Notes: 1 If you want to operate the pump in an environment with an ambient temperature of 0 °C (32 °F) or lower, contact your supplier or Edwards for advice.

- 2 Ensure that the cooling-air flow around the pump-motor is not restricted.
- 1. Refer to Figure 1. Remove from the fixing-holes (9) the four nuts and bolts which secure the pump frame (8) to the pallet.
- 2. Attach suitable lifting-equipment to the two lifting bolts (12) to move the pump.
- 3. Locate the pump on a firm, level surface. Ensure that the surface is clean and free from debris and contamination (such as oil). Use suitable bolts through the four fixing-holes (9) to secure the pump in position.

3.4 Check the gearbox oil-level

Refer to Figure 1. The pump is supplied filled with oil. Before you operate the pump, check that the gearbox oil-level is correct: the oil-level must be between the MIN and MAX marks on the bezel of the oil-level sight-glass (18): refer to detail B. If necessary, pour more oil into the gearbox: refer to Section 5.3.

3.5 Electrical connections




WARNING

Ensure that the electrical installation of your pump conforms with your local and national safety requirements. The pump must be connected to a suitably fused and protected electrical supply and a suitable Earth (ground) point.



Figure 3 - Schematic diagram of the recommended electrical connections

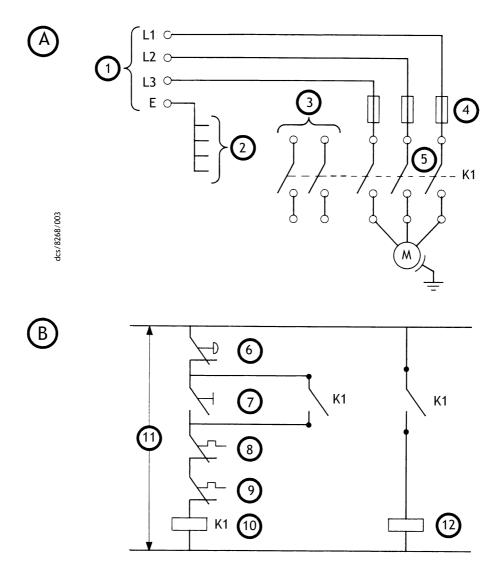

- 1. To your electrical supply
- 2. Earth (ground) points
- 3. Auxiliary contacts (2 off, normally closed)
- 4. Fuse or circuit breaker
- 5. Contactor K1 contacts
- 6. Stop control
- 7. Start control
- 8. Shut-down thermal snap-switch
- 9. Pump-motor thermistor contacts
- 10. Contactor K1 drive coil
- 11. Control voltage
- 12. Inlet-valve control solenoid (optional)

- A. Pump-motor connections
- B. Control circuit

Earth (ground) points			
Location	Size		
Thermal snap-switch box	M4 tapped hole		
Pump-motor	*		

Refer to the pump-motor terminal-box.



3.5.1 Introduction

We recommend that you connect the electrical supply to the pump through a suitable starter or circuit breaker which has thermal over-current protection and a thermistor control module which complies with IEC34-11 or BS4999 Part III. You must adjust the over-current protection to suit your installation.

The pump will restart automatically when the electrical supply is restored after it has been interrupted. If you do not want the pump to automatically restart, connect the electrical supply to the pump-motor through control equipment which must be manually reset after an electrical supply interruption.

Refer to Figure 1. Note that there are Earth (ground) points in the pump-motor terminal-box (3) and in the thermal snap-switch box (7).

3.5.2 Connect to the pump-motor terminal-box

CAUTION

Ensure that the pump-motor terminal box is correctly configured for your electrical supply. If the terminal-box is not correctly configured, you can damage the pump-motor when you operate it.

The bottom of the pump-motor terminal-box has a number of cable-entry leadthrough holes, sealed by plugs; you can connect to the terminal-box in one of two ways:

- You can use a single 6-core cable to connect the electrical supply to the pump-motor terminals and to connect the outputs of the motor protection thermistor to your control equipment. If you use this option, remove the plug from one of the cable-entry leadthrough holes.
- You can use a 4-core cable to connect the electrical supply to the pump-motor terminals, and use a 2-core
 cable to connect the outputs of the motor protection thermistor to your control equipment. If you use this
 option, remove the plugs from two of the cable-entry leadthrough holes.

Use the following procedure to make the electrical connections to the pump-motor terminal box:

- 1. Remove the cover from the pump-motor terminal-box (Figure 1, item 3).
- 2. Remove the plug (s) from the cable-entry leadthrough hole(s) that you intend to use from the bottom of the terminal-box.
- 3. Fit suitable cable-gland (s) and nut(s) to the entry hole (s), then pass the cable (s) through the cable-gland (s) and tighten the cable-gland (s). The cable-gland (s) you use must be rated to provide seal protection of IP55 (in IEC 529) or better to the terminal-box.
- 4. Ensure that the terminal-box is correctly configured for your electrical supply voltage, as indicated by the motor suppliers information. This will be on the rating plate or in the terminal box.
- 5. Connect the Earth (ground) wire in your cable to the Earth (ground) terminal (Figure 3, item 2).
- 6. Connect the other ends of the phase conductors and the Earth (ground) wire to your electrical supply.
- 7. Connect the two thermistor wires in your cable to the terminals on the thermistor block.
- 8. Connect the other end of the thermistor wires to your control equipment.
- 9. Tighten the cable-gland nut (s) strain-relief screws and refit the terminal-box cover.



3.5.3 Connect to the thermal snap-switches



WARNING

You must connect the shut-down thermal snap-switch so that the pump stops when the thermal snap-switch opens. If you do not, there may be a risk of fire or explosion.



WARNING

Incorporate a manual reset device in your control equipment. If you do not (and a fault which causes the shut-down thermal snap-switch to open is not corrected), the pump will automatically switch on again when it cools down. If you have started maintenance or fault finding on the pump, there will then be a risk of fire or explosion and injury to people.

CAUTION

Ensure that you route the thermal snap-switch cable away from hot surfaces of the pump or other equipment. If you do not, the cable may be damaged.

Connect the output of the warning thermal snap-switch to your control equipment to provide an indication that the pump is too hot.

You must connect the output of the shut-down thermal snap-switch to the electrical-overload control-loop of your contactor, so that the contactor will automatically switch off the pump if it is too hot: refer to Figure 3.


The thermal snap-switches will reset (that is, close again) when the pump cools down to a preset temperature (refer to Section 2). You must therefore ensure that your control equipment incorporates a manual reset device so that the pump does not automatically switch on again when it cools down.

Use the following procedure to connect to the thermal snap-switches. If you connect to the thermal snap-switches as described below, the outputs from the thermal snap-switches will be normally closed and will open when the pump is too hot.


- 1. Refer to Figure 4. Undo and remove the four bolts (3) which secure the cover (2) to the thermal snap-switch box (1), then remove the cover.
- 2. Remove the plastic bag from inside the box, then open the bag; this bag contains the crimp connectors and insulators you will use to connect to the snap-switches.
- 3. Pass a suitably rated four-core cable through the cable-gland (5).
- 4. Fit the crimp connectors to the ends of the four wires in the cable (4), then fit the insulators around the connections.
- 5. Fit the crimp connectors on one pair of wires (11) to the spade terminals (10) of the shut-down thermal snapswitch (9).
- 6. Connect the other ends of the same pair of wires to the electrical-overload loop of your contactor.
- 7. Fit the crimp connectors on the remaining pair of wires (6) to the spade terminals (7) on the warning thermal snap-switch (8).
- 8. Connect the other ends of the same pairs of wires to the warning circuit of your control equipment.
- 9. Tighten the cable-gland (5) to secure the cable in position.
- 10. Refit the cover (2) and secure with the four bolts (3).



Figure 4 - Connect to the thermal snap-switches

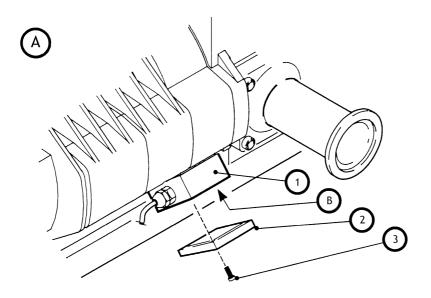

dcs/8268/004

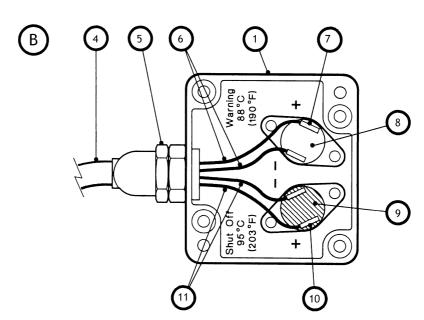

- 1. Thermal snap-switch box
- 2. Cover
- 3. Bolts (4 off)
- 4. Four-core cable
- 5. Cable-gland
- 6. Warning wires

- 7. Spade terminals
- 8. Warning thermal snap-switch
- 9. Shut-down thermal snap-switch
- 10. Spade terminals
- 11. Shut-down wires



3.6 Check the direction of pump rotation



WARNING

You must ensure that the direction of rotation of the pump is correct before you operate the pump. If you do not, and the pump direction of rotation is incorrect, the inlet pipeline will be pressurised and may be damaged and there will be a risk of injury to people or explosion or fire.

Note: If you cannot easily see the cooling-fan to determine its direction of rotation, watch the blanking-plate on the pump inlet; if the blanking-plate lifts from the inlet when you switch on the pump, the direction of rotation is incorrect.

- 1. Refer to Figure 1. Loosen the bolts which secure the blanking-plate to the pump-inlet (10), so that the blanking plate is free to move, but so that it cannot come off of the inlet. Remove the blanking-cap from the pump outlet (5).
- 2. Watch the cooling-fan (2), switch on the pump for one or two seconds, then switch the pump off.
- 3. If the cooling-fan does not rotate in the correct direction shown by the arrow (1) on the pump-motor, the direction of rotation is incorrect. If the direction of rotation is incorrect:
 - Isolate the pump from the electrical supply.
 - Reverse any two of the electrical supply phase-wires in the pump-motor terminal-box: refer to Section 3.5.
 - Repeat Step 2 and 3 to ensure that the direction of rotation is now correct.

3.7 Fit a mechanical booster pump (optional)

If you want to use a mechanical booster pump with the GV pump, fit it now. Details of the connection kits available from Edwards are given in Section 7.4.2. Refer to the installation procedures in the instruction manual supplied with the connection kit.

3.8 Connect the cooling-water supply

Note: The following procedure assumes that you use the GV pump with direct cooling, as supplied. If you want to use indirect cooling on the GV pump, install an Indirect Cooling Kit, and connect to the cooling-water supply as described in the instruction manual supplied with the Kit.

Take note of the following when you connect the cooling-water supply and return pipelines:

- If you need to connect more than one GV pump to the water supply, you must connect them in parallel and not in series.
- We recommend that you incorporate a suitable ball-type flow indicator in your water return pipeline, to provide a visual indication of cooling-water flow through the GV pump.
- We recommend that you incorporate a suitable filter in the water supply pipeline, if the water supply contains particulates.
- To prevent damage to the pump in the event of cooling-water supply failure or a blockage in the pump, we
 recommend that you incorporate a suitable flow-switch in the cooling-water return pipelines; you can
 connect the outputs of the flow-switch to your control equipment to shut-down the pump when the cooling
 water flow through the pump is too low.

Connect the cooling-water supply as described below; you must use 1/2 inch outside diameter pipes for the cooling water supply and return pipelines.

- 1. Fit the end of your cooling-water return pipeline to the guick connect fitting on the cooling-water outlet (11).
- 2. Fit the end of your cooling-water supply pipeline to the quick connect fitting on the cooling-water inlet.



3.9 Connect the shaft-seals purge and gas-ballast gas supplies

3.9.1 Introduction

You must determine the correct shaft-seals requirements for your application. You must connect nitrogen supplies to the gas systems if you want to pump dangerous gases.

If nitrogen shaft-seals purge is not required for your application, use the procedure in Section 3.9.2 to connect a compressed air supply to the shaft-seals purge inlet. As supplied, the gas-ballast system can deliver filtered atmospheric air to the pump gas-ballast inlet, so you do not need to connect an air supply to the gas-ballast system.

If required for your application, connect nitrogen supplies to the shaft-seals inlet. Use the procedures in Section 3.9.2 to connect nitrogen supplies to the shaft-seals purge inlet.

3.9.2 Connect the shaft-seals purge air or nitrogen supply



WARNING

If you want to pump dangerous gases, fit a suitable closed-circuit nitrogen supply to the shaft-seals purge inlet, to prevent the escape of dangerous gases from the pump.

CAUTION

Your compressed air or nitrogen supply pressure must comply with the requirements of Section 2.3. If it does not, the shaft-seals purge pipeline may become over-pressurised and the shaft-seals may fail.

Note: Your compressed air or nitrogen gas supply must be clean and dry.

Use the following procedure to connect your shaft-seals purge air or nitrogen supply; you must use a pipeline with an outside diameter of 1/4 inch for your air or nitrogen supply pipeline.

1. Fit the end of your air or nitrogen supply pipeline to the shaft-seals purge inlet connection (4), ensuring the quick connect fitting fully engaged.

3.10 Connect the pump-inlet and pump-outlet



WARNING

Take all necessary safety precautions when you pump toxic, flammable or explosive gases. If you do not, there will be a danger of injury or death to people.



WARNING

Ensure that your system can provide adequate gas-ballast and/or inlet purge to dilute toxic, flammable or explosive gases to safe limits. If you do not, there will be a risk of emission of hazardous gases.



WARNING

When the pump is switched off, gas will flow in reverse direction through the pump and there will be a rapid pressure rise in the inlet pipeline and your process system. If this will cause a dangerous situation (or if it will adversely affect your process), you must incorporate suitable devices (such as a fast-acting inlet isolation-valve or an outlet check-valve) in your system pipelines.



3.10.1 Connect the pump to your process system

When you connect the pump to the process system:

- Support process pipelines to stop the transmission of stress to pipeline joints.
- Use a flexible connection in the pipeline from the process system to the pump to reduce vibration and stress in the system pipelines.
- You must be able to isolate the pump from the atmosphere and from your process system if you have pumped or produced dangerous chemicals.
- On very dusty applications, incorporate an inlet filter in the inlet pipeline, to minimise the ingress of dust into the pump.
- To get the best pumping speed, ensure that the pipeline which connects the process system to the pump is as short as possible and has an internal diameter not less than the pump-inlet.
- Do not allow debris to get into the pump during installation. Ensure that debris (such as weld slag) cannot get into the pump during operation.
- If necessary, contact Edwards or your supplier for advice on inlet isolation-valves, outlet check-valves or other components suitable for your application and system design.

Use the following procedure to connect the inlet of the GV pump to your process system. This procedure assumes that a mechanical booster pump has not been fitted. If a mechanical booster pump has been fitted, use the instructions given in the appropriate instruction manual supplied with the mechanical booster pump.

- 1. Refer to Figure 1. Undo and remove the bolts which secure the blanking-plate to the pump-inlet (10) and remove the blanking-plate. Retain the bolts.
- 2. Use the trapped O-ring (fitted to the pump-inlet) to connect the pump-inlet (10) to your vacuum system; secure with the bolts retained in Step 1.

3.10.2 Connect the pump-outlet



WARNING

Pipe the exhaust to a suitable treatment plant to prevent the discharge of dangerous gases or vapours to the surrounding atmosphere.



WARNING

Ensure that your system can provide adequate gas-ballast and/or inlet purge to dilute toxic, flammable or explosive gases to safe limits. If you do not, there will be a risk of emission of hazardous gases.

CAUTION

Install an outlet catchpot to prevent the drainage of condensate back into the pump. If you do not, condensate which drains back into the pump may damage it or cause it to seize.

Your exhaust pipeline system must be designed so that the pressure in the pipeline during pump operation is less than 1.3 bar absolute (1.3 x 10⁵ Pa, 975 Torr). If the pressure in the pipeline is higher than this pressure, the pump will operate at a high temperature and may trip because of excessive electrical current consumption.

Incorporate flexible bellows in the exhaust pipeline to reduce the transmission of vibration and to prevent loading of coupling-joints. If you use flexible bellows, you must ensure that you use bellows which have a maximum pressure rating which is greater than the highest pressure that can be generated in your system, and which can withstand the maximum temperatures that can be generated by your process conditions.



Use the following procedure to connect the pump-outlet to your exhaust pipeline:

- 1. Refer to Figure 1. Remove the blanking-cap from the pump-outlet (5).
- 2. Use the NW40 clamping ring and trapped O-ring supplied in the fittings kit to connect the pump-outlet (5) to your exhaust pipeline.

3.11 Leak test the installation



WARNING

Leak-test the system after installation and maintenance and seal any leaks found to prevent the leakage of dangerous substances out of the system and leakage of air into the system.

Leak-test the system after installation and seal any leaks found. Substances which leak from the system may be dangerous to people and there may be a danger of explosion if air leaks into the system.

When supplied, the leak rate of the pump is tested to be less than 1 x 10^{-3} mbar I s⁻¹ (1 x 10^{-1} Pa I s⁻¹, 2.1 x 10^{-6} atm ft³ min⁻¹). The required leak rate for your system will depend on your safety and process requirements.

3.12 Commission the pump

Note: To check the operating temperature of the pump, measure the temperature of the pump at the point shown in Figure 1, item 6.

- 1. Isolate the pump from your process system.
- 2. Ensure that the gas-ballast flow valve (Figure 1, item 14) is closed.
- Turn on the cooling-water supply, the shaft-seals purge air or nitrogen supply, the gas-ballast nitrogen supply (if fitted) and your exhaust-extraction system. Ensure that the pressures and flow rates are as specified in Section 2.3.
- 4. Check that there are no leaks in the water, air, nitrogen (if fitted) and exhaust-extraction system connections. Seal any leaks found.
- 5. Switch on the pump.
- 6. Check that the pressure shown on your shaft-seals purge air or nitrogen pressure gauge is as specified in Section 2.3. If necessary, adjust the pressure of the air or nitrogen supply.
- 7. Leave the pump to operate for approximately 15 minutes to allow the pump operating temperature to stabilise.
- 8. Check that the pump operating temperature is in the range 30 to 45 °C (86 to 113 °F); if the pump operating temperature is outside this range, refer to Section 5.12.
- 9. Turn off the pump, the cooling-water supply, the shaft-seals air or nitrogen purge supply and the gas-ballast nitrogen supply (if fitted).



4 Operation



WARNING

During operation, some parts of the pump become hot; these areas are identified by 'hot surface' labels (refer to Section 1.1). Do not touch these areas of the pump and avoid accidental contact between these areas of the pump and electrical cables and wires, and so forth.



WARNING

Do not operate the pump with the pump-inlet or pump-outlet open to atmosphere. If you do, there will be a danger of injury or death from the rotating mechanisms, from the exposure to vacuum, or from hot exhaust gases.

The procedures in the following sections assume that you have a pump-inlet isolation-valve fitted to your pump.

4.1 Start the pump

CAUTION

Allow the pump to warm up and use full gas-ballast and inlet purge (if fitted) before you pump condensable vapours. If you do not, the vapours may condense in the pump and corrode or damage the pump.

Use the procedure below to start the pump.

- 1. Check the gearbox oil-level in the sight-glass on the side of the pump: refer to Section 3.4.
- 2. Turn on your cooling-water supply, then bleed the trapped air from the water jacket:
 - Remove the air-bleed plug (Figure 1, item 19).
 - When the water level reaches the top of the plug hole, refit the air-bleed plug.
- 3. Turn on the shaft-seals purge air or nitrogen supply, gas-ballast nitrogen supply (if fitted) and exhaust-extraction system (if fitted).
- 4. Switch on the pump.
- 5. Continue at Section 4.2 to check the purge pressures and flows.



4.2 Check the purge pressures and flows



WARNING

Ensure that you do not touch the pump-body when you adjust the gas-ballast flow valve. During operation, parts of the pump can become hot.

Do the following checks immediately after pump start and regularly during pump operation:

- Check that the pressure of your shaft-seals purge air or nitrogen supply is correct and adjust if necessary (refer to Section 2.3).
- If fitted, check that the pressure of your gas-ballast nitrogen supply is correct and adjust if necessary.
- If necessary, adjust the gas-ballast flow valve (Figure 1, item 14) to achieve the required gas-ballast flow into the pump:
 - Turn the adjuster knob clockwise to reduce the gas-ballast flow; turn the knob fully clockwise to switch
 off gas-ballast flow.
 - Turn the adjuster knob anticlockwise to increase the gas-ballast flow.

4.3 Shut down the pump

CAUTION

Purge the pump before you shut it down. If you do not, process vapours may condense in the pump and corrode or damage it.

Note: If you want to shut down the pump for a long time in an environment where the temperature is close to freezing, we recommend that you drain the cooling-water from the pump to prevent damage to the pump: refer to Section 6.1.

- 1. Isolate the pump-inlet from the process gases.
- 2. Refer to Figure 1. Purge the pump of contaminants: operate the pump with full gas-ballast (that is, with the gas-ballast flow valve (14) open) for at least 15 minutes. Alternatively, use one of the following methods:
 - Operate the pump at or close to atmospheric pressure for at least 15 minutes; this is the recommended method for dusty processes.
 - Operate the pump with full inlet purge (if fitted) for at least 15 minutes.
- 3. Close the gas-ballast flow valve (13), or switch off inlet purge (if fitted).
- 4. Switch off the pump.
- 5. When the pump has cooled down, turn off the cooling-water supply.
- 6. Switch off the shaft-seals purge nitrogen supply (if fitted).



5 Maintenance

5.1 Safety



WARNING

Obey the safety instructions given below and take note of appropriate precautions. If you do not, you can cause injury to people and damage to equipment.

- A suitably trained and supervised technician must maintain the pump.
- Ensure that the maintenance technician is familiar with the safety procedures which relate to the synthetic
 oils and greases used and the products pumped. Wear the appropriate safety-clothing when you come into
 contact with contaminated components, grease and pump oil. Dismantle and clean contaminated
 components inside a fume-cupboard.
- Use suitable lifting equipment and wear safety shoes when you replace the pump-motor or the pump module.
- Allow the pump to cool to a safe temperature before you start maintenance work.
- Isolate the pump and other components in the process system from the electrical supply so that they can not be operated accidentally.
- Recheck the pump rotation direction if the electrical supply has been disconnected.
- Do not reuse O-rings or gaskets if they are damaged.
- Protect sealing-faces from damage.
- Do not touch or inhale the thermal breakdown products of fluorinated materials which may be present if the pump has overheated to 260 °C (500 °F) and above. These breakdown products are very dangerous. The pump may have overheated if it was misused, if it malfunctioned, or if it was in a fire. Edwards Material Safety Data Sheets for the fluorinated materials used in the pump are available on request: contact your supplier or Edwards.
- Leak-test the system after installation work is complete and seal any leaks found to prevent leakage of dangerous substances out of the system and leakage of air into the system: refer to Section 3.11.



5.2 Maintenance plan

The plan in Table 9 details the maintenance operations we recommend to maintain the pump in normal operation. Instructions for each operation are given in the section shown. In practice, the frequency of maintenance is dependent on your process. In clean processes, you may be able to decrease the frequency of maintenance operations; in harsh processes you may have to increase the frequency of maintenance operations. Adjust the maintenance plan according to your experience.

Table 9 - Maintenance plan

Operation	Frequency	Refer to Section
Check the gearbox oil-level and fill the gearbox with oil (if necessary)	Weekly	5.3
Inspect the gas-ballast system	Monthly	5.4
Inspect the pipelines and connections	3 Monthly	5.5
Change the gearbox oil and clean the oil-level sight-glass*		
	When you relubricate the high vacuum bearings or when contaminated, whichever occurs first ^{†‡}	5.6
Relubricate the high vacuum bearings	When necessary**	5.7
Clean the cooling-jacket	Yearly or when necessary	5.8
Replace the gas-ballast filter	Yearly or when necessary	5.9
Replace the pump-motor bearings	Every 35000 hours of operation	5.10
Overhaul the pump	3 Yearly	5.11

You must have a Routine Maintenance Kit (refer to Section 7.3) to do these maintenance operations.

5.3 Check the gearbox oil-level and fill the gearbox with oil (if necessary)

Note: If you need to pour oil into the gearbox frequently, or if there is a sudden loss of a large amount of oil, the pump may be faulty: shut down the pump and contact your supplier or Edwards.

Refer to Figure 1 which shows the location of the oil-level sight-glass on the pump. Check that the pump gearbox oil level is at the MAX mark on the bezel of the oil-level sight-glass (18): see detail C. If the oil-level is below the MAX mark:

- 1. Refer to Figure 5. Remove the oil filler-plug (1) and O-ring (2) from the oil filler-port (3), fit a suitable funnel to the oil filler-port, then pour the oil through the funnel into the pump gearbox until the oil-level is at the MAX mark on the bezel of the oil-level sight-glass (refer to Figure 1, detail B). We recommend that you use the oil type specified in Section 2.5.1.
- 2. If you overfill the gearbox, use a suitable pump or syringe to suck oil out of the gearbox; when the oil-level reaches the MAX mark on the sight-glass (refer to Figure 1, detail B), refit and tighten the oil drain-plug and Oring Figure 5, (2); continue at Step 1 again, to check that the oil-level is now correct.
- 3. Refit the oil filler-plug (1) and O-ring (2) to the oil filler-port (3) and tighten.

for maximum pump reliability, we recommend that you change the gearbox oil when you relubricate the high vacuum bearings: refer to Section 5.8.

If the gearbox oil is contaminated (indicated by a change in colour of the oil, for example, water contamination will turn the oil a white colour), you must change the oil. You may be able to remove the contaminants from the oil by filtration.

The frequency of maintenance depends on the operating temperature of the pump: refer to Section 5.8.



5.4 Inspect the gas-ballast system

Use the following procedure to inspect the gas-ballast system. Note that if you have not connected a nitrogen gas-ballast supply, you must replace the gas-ballast air filter every year (refer to Section 5.9). However, you may need to replace the air filter more frequently if you use the GV pump in an environment where there are excessive air-borne particulates; refer to Section 7.3 for the Item Number for the routine maintenance kit, which contains a replacement air filter.


- 1. Refer to Figure 1. If you have connected a nitrogen gas-ballast supply, continue at Step 5, otherwise continue at Step 2 to inspect the air filter.
- 2. Inspect the air filter (16); if there are excessive deposits lodged in the air filter, continue at Step 3, otherwise continue at Step 5.
- 3. Remove the air filter (16) from the gas-ballast inlet (15); dispose of the air filter.
- 4. Fit a new air filter (16) to the gas-ballast inlet (15).
- 5. Inspect all of the clamps in the gas-ballast system and check that they are secure: tighten any loose connections.

5.5 Inspect the pipelines and connections

- 1. Inspect all cooling-water pipelines and connections; check that they are not corroded or damaged. Replace any of the pipelines and connections that are corroded or damaged. Check that all cooling-water connections are secure. Tighten any connections that are loose.
- 2. Inspect all air or nitrogen supply pipelines and connections; check that they are not corroded or damaged. Replace any pipelines and connections that are corroded or damaged. Check that all air or nitrogen supply connections are secure. Tighten any connections that are loose.
- 3. Inspect all electrical cables; check that they are not damaged and have not overheated. Replace any cables that are damaged or have overheated. Check that all electrical connections are secure. Tighten any connections that are loose.
- 4. Inspect all process and exhaust pipelines; check that they are not corroded or damaged. Replace any pipelines that are corroded or damaged. Check that all process and exhaust connections are secure. Tighten any connections that are loose.



Figure 5 - Oil-level sight-glass and oil filler-port

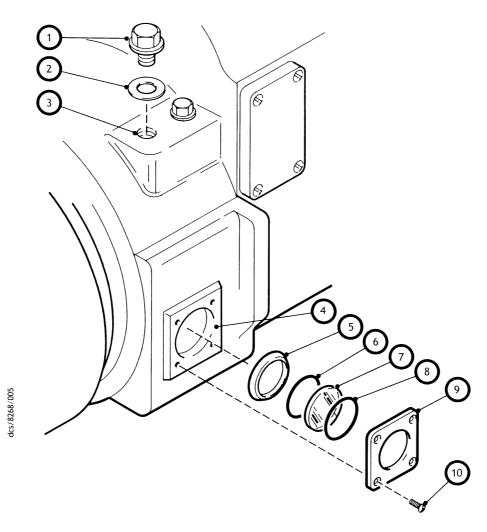

- 1. Filler-plug
- 2. O-ring
- 3. Oil filler-port
- 4. Sight-glass fitting
- 5. Compression ring
- 6. O-ring
- 7. Sight-glass
- 8. O-ring
- 9. Bezel
- 10. Screws (4 off)



5.6 Change the gearbox oil and clean the oil-level sight-glass



WARNING

Changing the oil in a pump from hydrocarbon to PFPE (Fomblin) could potentially cause a safety hazard. Fomblin pumps are generally used in hazardous applications which may involve the pumping of gases with high concentrations of oxygen. If hydrocarbon oil comes into contact with gases with an oxygen concentration greater than 25%, an explosion can occur.

Therefore, if you want to convert a pump that has been used with hydrocarbon oil to use PFPE (Fomblin) oil, you cannot simply flush the pump with new PFPE oil. You must return the pump to an Edwards Service Centre for overhaul and cleaning by qualified Edwards service engineers. The change in oil type requires a complete strip down of the pump, and thorough cleaning of all parts, so that all traces of hydrocarbon oil are removed.



WARNING

Ensure that you do not come into contact with the used pump oil. The used oil may be hot and can cause injury.

Notes: 1 If the used oil drained from the pump is very discoloured, fill the gearbox with new oil then suck out the oil two or three times, until the oil which you suck out of the gearbox is clean.

2 New O-rings are included in the routine maintenance kit: see Section 7.3.

Refer to Figure 1. You must clean the oil-level sight-glass (16) when you change the gearbox oil. Use the following procedure to clean each sight-glass.

- 1. Refer to Figure 5 remove the oil filler-plug (1) and O-ring (2). Dispose of the O-ring (2).
- 2. Use a suitable pump or syringe to suck the used oil out of the gearbox.
- 3. Undo and remove the four M5 screws (10) from the sight-glass bezel (9).
- 4. Remove the bezel (9), O-ring (8), sight-glass (7), O-ring (6) and compression ring (5). Dispose of the O-rings.
- 5. Clean all of the sight-glass components and the sight-glass recess in the fitting (4) with a soft lint-free cloth. If necessary, use a suitable cleaning solution; if you use a cleaning solution, ensure that all of the solution is removed before you reassemble the sight-glass.
- 6. Refit the compression ring (5) in the sight-glass fitting (4).
- 7. Fit two new O-rings (6, 8) and the sight-glass (7), then fit the bezel (9) and secure with the four M5 screws (10).
- 8. Place a suitable funnel in the oil filler-port (3).
- 9. Pour new oil into the gearbox; allow the oil to drain into the gearbox and then check the level on the oil sightglass (refer to Section 5.3). We recommend that you use the oil type specified in Section 2.5.1.
- 10. Remove the funnel and refit the oil filler-plug (1) and O-ring (2) to the oil filler-port (3).
- 11. Dispose of the used oil safely: refer to Section 6.2.




5.7 Relubricate the high vacuum bearings

- 1. Refer to Figure 6. Undo and remove the six screws (6) which secure the bearing end-cover (5) to the high vacuum head-plate (3).
- 2. Lift away the end-cover (5) and remove the O-ring (1). Dispose of the O-ring.
- 3. Use a clean lint-free cloth or a plastic or wooden spatula to remove as much old grease as possible from the end cover (5) and bearings (2). Do not use your fingers for this operation.
- 4. Inspect the bearings (2) for obvious signs of wear or the presence of debris. If the bearings are worn, return the pump to an Edwards Service Centre for repair.
- 5. If the bearings are in a satisfactory condition, force new PFPE grease (supplied in the maintenance kit) into the bearings so that a smooth layer of grease covers the case and bearings: do not put grease into the bearing end cover (5), and do not over-pack the bearings or the pump will run hot.
- 6. Apply a light wipe of PFPE grease to the new O-ring (1) and position the O-ring in its groove in the head-plate (3).
- 7. Refit the bearing end-cover (5) to the head-plate (3) and secure with the six screws (6).



Figure 6 - Relubricate the high vacuum bearings

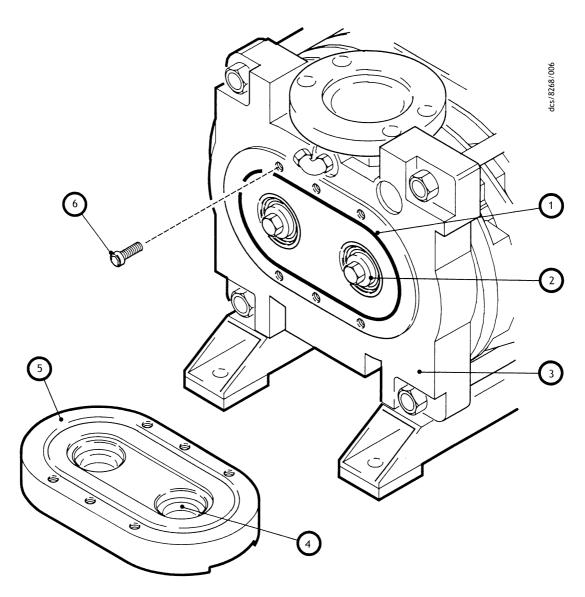

- O-ring
 Bearing
 High-vacuum head-plate
- 4. End-cover cavity
- 5. Bearing end-cover
- 6. Screw



5.8 Flush the cooling jacket



WARNING

If the water flow through the cooling jacket is blocked or restricted, the water in the pump may get very hot. Allow the pump to cool down before you remove the cooling-water connections. If you do not, hot water may be ejected from the pump and may cause injury.

Flush the cooling jacket every year or when you think that the cooling efficiency is reduced because of deposits or other contamination in the cooling jacket. The pressure and flow rate of the water supply that you use to flush the cooling jacket must be equal to or higher than the normal cooling-water supply. Do not exceed the pressure specified in Section 2.3.

- 1. Switch off your cooling-water supply.
- 2. Refer to Figure 1. Disconnect the cooling-water supply and return pipelines from the water inlet (21) and outlet (11).
- 3. Fit a suitable water supply pipeline to the water outlet connection (11), and fit a suitable water return pipeline to the water inlet connection (21).
- 4. Turn on the water supply to flush the cooling jacket in the reverse direction, and wash out any deposits from the cooling jacket.
- 5. Allow the water to flow for a few minutes, switch off the water supply, then disconnect the water return pipeline.
- 6. Place a suitable splash tray under the cooling-water inlet connection (21), then unscrew and remove the 3/8 inch BSP water inlet fitting (that is, the fitting to which the cooling-water inlet connection is fitted).
- 7. Use a suitable tool to remove any sediments from the port.
- 8. Turn on the water supply for a short time to flush any remaining deposits from the cooling-jacket.
- 9. Disconnect the water supply pipeline from the cooling-water outlet connection (11), then dispose of the water and deposits in the splash tray.
- 10. Apply a suitable thread sealant (such as Loctite 577) to the threads of the 3/8 inch BSP water inlet fitting, then refit the fitting to the port in the end of the pump.
- 11. Refit your pump cooling-water supply and return pipelines to the water inlet (21) and outlet (11) connections.

5.9 Replace the gas-ballast filter

- 1. Refer to Figure 1. Unscrew and remove the air filter (16) from the gas-ballast inlet (15); dispose of the air filter.
- 2. Fit a new air filter (16) to the gas-ballast inlet (15); refer to Section 7.3 for the Item Number for the routine maintenance kit, which contains a replacement air filter.



5.10 Replace the pump-motor bearings



WARNING

Do not replace the pump-motor bearings unless you have been suitably trained in the necessary procedures. If you are not suitably trained, you may damage the motor and it may not operate correctly or safely.

You must only replace the pump-motor bearings if you have been suitably trained in all of the procedures required to remove and refit the motor, to dismantle and reassemble the motor, and to replace the motor bearings.

When you replace the pump-motor bearings:

- You will need a Motor bearing kit (refer to Section 7.3).
- Only use approved procedures to remove and refit the pump-motor, to dismantle and reassemble the pump-motor, and to replace the pump-motor bearings.
- You must lightly lubricate the new bearings with a suitable grease, such as:
 - BP LC2 Energrease.
 - Esso N2 Unirex.
 - Castrol LMX.
 - Mobil HP Mobilgrease.
- To drive the bearings onto the rotor shaft, use a short length of suitable tube or a suitable drift to apply pressure only to the inner races of the bearings.

5.11 Overhaul the pump

We recommend that the pump is given a major overhaul every three years. Such an overhaul is outside the scope of this manual and should be done by qualified Edwards service personnel: contact your supplier or Edwards.



5.12 Fault finding

Table 10 - Fault finding

Symptom	Check	Action
The pump suddenly stops.	Is there a hydraulic lock in the pump?	Switch off and drain the fluid from the pump. If necessary, turn the pump by hand.
	Has the shut-down thermal snap- switch operated to stop the pump because the pump is operating at too high a temperature?	Check that there is a sufficient flow of cooling-water through the pump: check that the cooling-water supply is on, is at the correct pressure and is of the correct temperature.
	Has the cooling-water supply been interrupted, or has it failed?	If your cooling-water supply is on and is at the correct pressure and temperature, the cooling jacket may be blocked: clean the cooling jacket (refer to Section 5.8).
	Has the pump seized because the shutdown thermal snap-switch is faulty?	Check the operating temperature of the pump (at the position shown in Figure 1, item 6). If the operating temperature is higher than 100 °C (212 °F), there has been insufficient cooling-water flow through the pump and the thermal snap-switch is faulty: contact your supplier or Edwards for advice.
	Has the pump seized due to deposits?	Switch off the pump and contact your supplier or Edwards.
The pump operates at too high a temperature or the pump temperature is unstable.	Is the cooling-water flow inadequate, is the flow variable, or is the flow being interrupted?	Before you restart the pump, check for correct cooling-water flow (see above).
The gearbox and oil are contaminated with the process substances pumped.	Has the shaft-seal purge failed?	Check the pressure of the air or nitrogen purge flow to the shaft-seals; if necessary adjust the air or nitrogen pressure. Change the gearbox oil before you restart the pump (refer to Section 5.6).
		If the shaft-seal purge has not failed, the internal pump seals may have failed. Contact your supplier or Edwards for advice.
The gearbox is noisy.	Is the oil-level low?	Check the oil-level and fill as necessary (refer to Section 5.3).
The pump does not operate.	Is the pump-motor faulty?	Make all the other appropriate checks in this table. If there is no other apparent cause for failure of the pump to operate, the pumpmotor may have failed: contact your supplier or Edwards.



6 Storage and disposal

6.1 Storage

Note: If you want to store the pump in an environment with an ambient temperature below - 14 °C (7 °F), you must also drain the oil from the pump: use the procedure in Section 5.6, then refit the oil drain-plug to the pump before you store it.

Store the pump as follows:

- 1. Ensure that the pump has been shut down as described in Section 4.3, then disconnect the pump from the electrical supply.
- 2. Refer to Figure 1. Place a suitable container under the cooling-water inlet and outlet (21, 11), then remove your cooling-water supply and return pipelines from the connections and allow the cooling-water to drain from the pump.
- 3. Disconnect the shaft-seals purge air or nitrogen supply from the shaft-seals purge inlet (4). If fitted, disconnect the gas-ballast nitrogen supply from the gas-ballast system.
- 4. Disconnect the pump-inlet (10) and outlet (5) from your process and exhaust pipelines.
- 5. Fit blanking-plates to the pump-inlet (10) and pump-outlet (5). Place protective covers over the pump services connection points.
- 6. Store the pump in clean dry conditions until required.
- 7. When required for use, prepare and install the pump as described in Section 3 of this manual.

6.2 Disposal

Dispose of the pump, cleaning solution, deposits removed from the pump, used pump oil, grease and any components (for example, the gas-ballast filter) safely in accordance with all local and national safety and environmental requirements.

Take particular care with the following:

- Fluoroelastomers which may have decomposed as the result of being subjected to high temperatures.
- Components and oil which have been contaminated with dangerous process substances.



This page has been intentionally left blank.



7 Service, spares and accessories

7.1 Introduction

Edwards products, spares and accessories are available from Edwards companies in Belgium, Brazil, China, France, Germany, Israel, Italy, Japan, Korea, Singapore, United Kingdom, U.S.A. and a world-wide network of distributors. The majority of these centres employ Service Engineers who have undergone comprehensive Edwards training courses.

Order spare parts and accessories from your nearest Edwards company or distributor. When you order, please state for each part required:

- Model and Item Number of your equipment.
- Serial number (if any).
- Item Number and description of the part.

7.2 Service

Edwards products are supported by a world-wide network of Edwards Service Centres. Each Service Centre offers a wide range of options including: equipment decontamination; service exchange; repair; rebuild and testing to factory specifications. Equipment which has been serviced, repaired or rebuilt is returned with a full warranty.

Your local Service Centre can also provide Edwards engineers to support on-site maintenance, service or repair of your equipment.

For more information about service options, contact your nearest Service Centre or other Edwards company.

7.3 Spares and maintenance kits

Table 11 - Spares and maintenance kits

Spare	Item number
Mobil SHC 629 oil: 1 litre (0.26 US gallons)	H11023010
Mobil SHC 629 oil: 4 litres (1.32 US gallons)	H11023011
Routine maintenance kit	A70212825
Motor bearing kit	A07199073

7.4 Accessories

A number of accessories are available for the GV pumps, as described in the following sections.

7.4.1 Exhaust silencer

Fit an exhaust silencer to attenuate the pulses in the exhaust pressure, and to reduce pump-induced resonance in your exhaust-extraction system.

Table 12 - Exhaust silencer

Accessory	Item number
GV80 Exhaust Silencer	A50805020



7.4.2 Booster connection kit

Use a Booster Connection Kit to allow you to fit an EH mechanical booster pump to the inlet of the GV pump.

Table 13 - Booster connection kit


Accessory	Item number
GV80-EH500A Booster Connection Kit	A50560000


7.4.3 Acoustic enclosure

When fitted, the Acoustic Enclosure reduces the noise level emitted from the pump.

Table 14 - Acoustic enclosure

Accessory Item	Item number
GV80 Acoustic Enclosure	A50575000

 

 

Return the equipment or components for service

Before you send your equipment to us for service or for any other reason, you must send us a completed Declaration of Contamination of Vacuum Equipment and Components - Form HS2. The HS2 form tells us if any substances found in the equipment are hazardous, which is important for the safety of our employees and all other people involved in the service of your equipment. The hazard information also lets us select the correct procedures to service your equipment.

We provide instructions for completing the form in the Declaration of Contamination of Vacuum equipment and Components - Procedure HS1.

If you are returning a vacuum pump, note the following:

- If a pump is configured to suit the application, make a record of the configuration before returning the pump. All replacement pumps will be supplied with default factory settings.
- Do not return a pump with accessories fitted. Remove all accessories and retain them for future use.
- The instruction in the returns procedure to drain all fluids does not apply to the lubricant in pump oil reservoirs.

Download the latest documents from www.edwardsvacuum.com/HSForms/, follow the procedure in HS1, fill in the electronic HS2 form, print it, sign it, and return the signed copy to Edwards.

Note: If we do not receive a completed HS2 form, we will not accept the return of the equipment.