



# OPERATING INSTRUCTIONS

EN

Translation of the original instructions

## TPG 202

Measurement unit

**PFEIFFER**  **VACUUM**

# Table of contents

<b>1</b>	<b>About this manual</b> .....	<b>3</b>
	1.1 Validity .....	3
	1.2 Conventions .....	3
<b>2</b>	<b>Safety</b> .....	<b>4</b>
	2.1 Safety precautions .....	4
	2.2 Proper use .....	4
	2.3 Improper use .....	4
<b>3</b>	<b>Product description</b> .....	<b>5</b>
	3.1 Product identification .....	5
	3.2 Function .....	5
	3.3 Range of application .....	6
<b>4</b>	<b>Transport and storage</b> .....	<b>6</b>
<b>5</b>	<b>Installation</b> .....	<b>6</b>
	5.1 Vacuum connection .....	6
	5.2 Electrical connection .....	6
	5.3 USB connection .....	7
<b>6</b>	<b>Operation</b> .....	<b>9</b>
	6.1 Switching on .....	9
	6.2 Storing Data .....	10
	6.3 Choose unit .....	11
	6.4 TPG 202 calibration .....	12
	6.5 PC mode .....	13
	6.6 Configuring the data exchange .....	14
	6.7 Pfeiffer Vacuum Protocol for "USB" .....	16
<b>7</b>	<b>Maintenance</b> .....	<b>16</b>
<b>8</b>	<b>Troubleshooting</b> .....	<b>17</b>
<b>9</b>	<b>Service</b> .....	<b>18</b>
<b>10</b>	<b>Accessories</b> .....	<b>18</b>
<b>11</b>	<b>Technical data and dimensions</b> .....	<b>19</b>
	11.1 Technical data .....	19
	11.2 Dimensions .....	19
	11.3 Gas correction factor .....	20
	<b>Declaration of conformity</b> .....	<b>21</b>

# 1 About this manual

## 1.1 Validity

This operating manual is for customers of Pfeiffer Vacuum. It describes the functioning of the designated product and provides the most important information for safe use of the unit. The description follows applicable EU guidelines. All information provided in this operating manual refers to the current state of the product's development. The documentation remains valid as long as the customer does not make any changes to the product.

Up-to-date operating instructions can also be downloaded from [www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com).

## 1.2 Conventions

### Safety instructions

The safety instructions in Pfeiffer Vacuum operating instructions are the result of risk evaluations and hazard analyses and are oriented on international certification standards as specified by UL, CSA, ANSI Z-535, SEMI S1, ISO 3864 and DIN 4844. In this document, the following hazard levels and information are considered:

<b>DANGER</b>
<b>Imminent danger</b> Indicates an imminent hazardous situation that will result in death or serious injury.
<b>WARNING</b>
<b>Possibly imminent danger</b> Indicates an imminent hazardous situation that can result in death or serious injury.
<b>CAUTION</b>
<b>Possibly imminent danger</b> Indicates an imminent hazardous situation that can result in minor or moderate injury.
<b>NOTICE</b>
<b>Command or note</b> Command to perform an action or information about properties, the disregarding of which may result in damage to the product.


### Pictographs



Prohibition of an action to avoid any risk of accidents, the disregarding of which may result in serious accidents



Warning of a displayed source of danger in connection with operation of the unit or equipment



Command to perform an action or task associated with a source of danger, the disregarding of which may result in serious accidents



Important information about the product or this document

**Instructions in the text**

→ Work instruction: here you have to do something.

**Abbreviations**

**TPG:** Measurement and control unit

## 2 Safety

### 2.1 Safety precautions



#### **Duty to inform**

Each person involved in the installation or operation of the unit must read and observe the safety-related parts of these operating instructions.

→ The operator is obligated to make operating personnel aware of dangers originating from the unit or the entire system.

- Observe the safety and accident prevention regulations.
- Check regularly that all safety precautions are being complied with.
- The unit has been accredited with protection class IP 40. Take necessary measures when installing into ambient conditions, which afford other protection classes.
- Consider possible reactions between the materials and the process media.
- Consider possible reactions of the process media due to the heat generated by the product.
- Do not modify or alter the unit yourself.
- Ensure specified mains voltage.
- Note the shipping instructions, when returning the unit.
- Inform yourself about a possible contamination before starting work.
- Adhere to the relevant regulations and take the necessary precautions, when handling contaminated parts.
- Communicate the safety instructions to other users.

### 2.2 Proper use

The measurement unit TPG 202 serves exclusively to provide total measurements in the range 1200 ...  $5 \cdot 10^{-4}$  hPa. It may only be connected to components specifically provided for this purpose.

### 2.3 Improper use

Improper is:

- Uses not covered above, and, in particular:
  - connection to pumps and units which is not permitted in their operating instructions;
  - connection to units which contain touchable and voltage carrying parts.

Improper use will cause any rights regarding liability and guarantees to be forfeited.

## 3 Product description

### 3.1 Product identification

To correctly identify the product when communicating with Pfeiffer Vacuum, always have the information from the rating plate available.

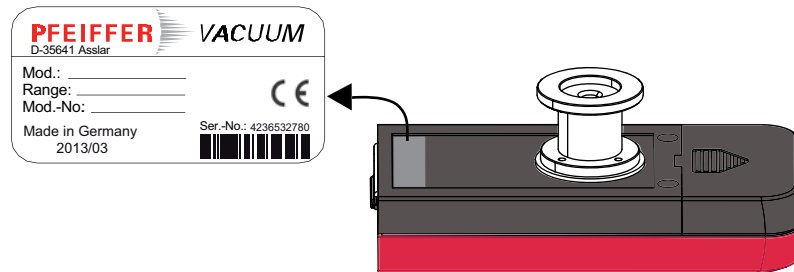


Fig. 1: Product identification on the rating plate (example)

### 3.2 Function

The measurement unit TPG 202 is equipped with a combined Piezo-/Pirani sensor and enables total pressure measurements in the range of 1200 ...  $5 \cdot 10^{-4}$  hPa.


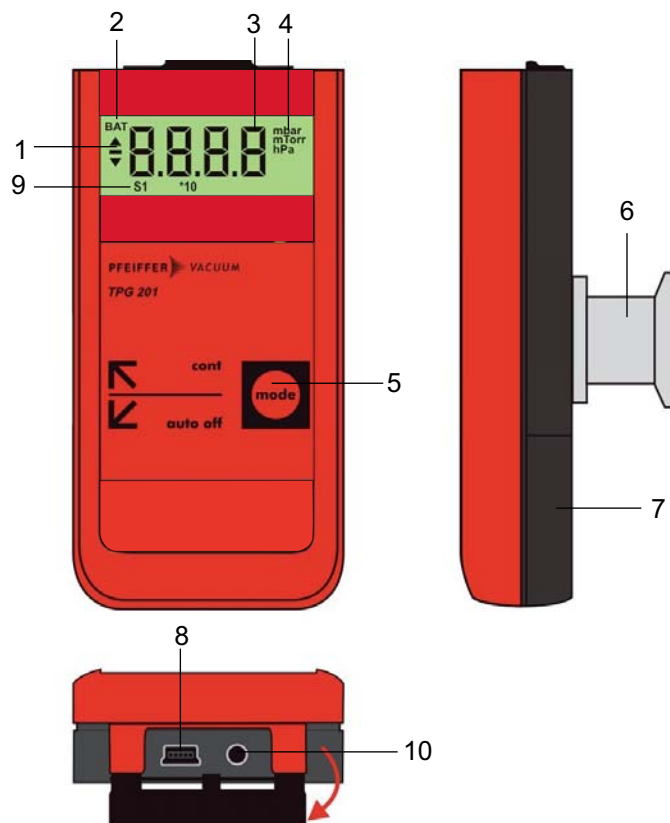


Fig. 2: TPG 202

- 1 Operating mode
- 2 "Change battery" display
- 3 Pressure reading, refresh: 1.0 s
- 4 Measurement unit "mbar, Torr, Pa, hPa"
- 5 Mode key
- 6 Small flange DN 16 ISO-KF
- 7 Battery compartment cover
- 8 USB port
- 9 Active gas correction factor

- 10 Connection for line adapter 12 V=, 50 mA, plug 2.5 mm (+ at tip)

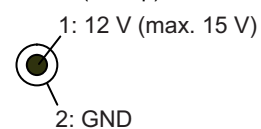

**Scope of delivery**

The following positions are included in the delivery consignment:

- TPG 202
- Operating instructions
- Block battery (9 V)

**3.3 Range of application**

The unit TPG 202 must be installed and operated in the following ambient conditions:

Installation location	weather protected (indoor)
Protection class	IP40
Installation altitude	max. 2000 m
Ambient temperature	+5 – +40°C
Relative humidity	max. 85 %
Atmospheric pressure	860 hPa – 1060 hPa

**4 Transport and storage**

Units without external protection must not come into contact with electrostatically chargeable materials and must not be moved within electrical or magnetic fields.

- In rooms with moist or aggressive atmospheres, the unit must be airproof shrink-wrapped in a plastic bag together with a bag of desiccant.

**5 Installation**

**5.1 Vacuum connection**

- Remove the protective cover, which is required during maintenance work.
- Make vacuum connection via small flange DN 16 ISO-KF.



<b>CAUTION</b>	
<b>Excess pressure in the vacuum system &gt; 1000 hPa</b>	Danger of injuries by inadvertent opening of elements under stress due to parts flying around. → Only use stressed elements, which can be opened and closed with appropriate tools (e.g. strap retainer-tension ring).



<b>CAUTION</b>	
<b>Excess pressure in the vacuum system 1500 to 4000 hPa</b>	Damage to health through emission of process media, because elastomer washers cannot withstand the pressure. → Use sealing rings with an outer centering ring.

**5.2 Electrical connection**

**Battery operation**

Before operating the unit a suitable battery or an accumulator must be inserted.

- Pull the battery cover on the back downwards and insert the battery.

→ Close the cover again by pushing it upwards until it snaps into position.



Battery types:

- 9 V Alkali Mangan block battery type 6LR 6; lifetime approx. 40 h
- 9 V Lithium block battery; lifetime approx. 100 h



#### Poor battery power

Poor battery power is indicated by the „BAT“-prompt in the upper left corner of the display. Operation of the unit is still possible. Once the battery is used up, the unit switches off.

- Change battery or accumulator or recharge accumulator.
- If the unit is not used for a longer time, remove the battery to avoid damages from leaking chemicals.

### Operation with power supply

The TPG can be operated alternatively to battery operation with an external power supply (12V). The sockets for the power supply and the USB service interface are located behind a dust protection lid.

→ Open the lid carefully and pull it out slightly.



#### Battery/Accumulator

An inserted battery can remain with attached power supply in the unit. An inserted accumulator is not loaded with attached power supply, but can remain in the unit.

- Use commercially available chargers for loading of accumulators.

## 5.3 USB connection

The USB port can be connected to a PC, for instance in order to read out the data storage unit, document measurements, or configure the device using Windows<sup>1)</sup> DokuStar software.

<sup>1)</sup> Windows® is a registered trademark of the Microsoft Cooperation.

Mini socket type B



Pin	Assignment
1	VCC, + 5V
2	Data -
3	Data +
4	GND
5	GND

### Install USB driver


The requisite USB driver TPG 202 can be found on the USB drive in the accessories case (PT 350 102 -T) or at [www.pfeiffer-vacuum.de/Downloads/Software](http://www.pfeiffer-vacuum.de/Downloads/Software).

- ➔ Insert the USB drive into the PC's USB port.
- ➔ Start installation:
  - Laufwerk/USB-Treiber TPG/Setup.EXE
- ➔ Follow the rest of the installation instructions.
- ➔ Connect TPG 202 to the PC using a USB cable (from the accessories case).



# 6 Operation

## 6.1 Switching on

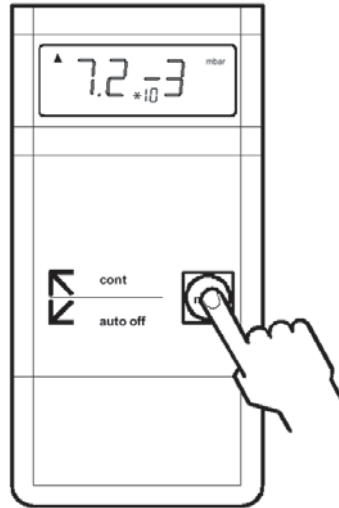

**Symbols to the left of the pressure reading:**



Press "mode"



"cont," continuous operation



"auto off," device will automatically shut down in 20 s



Logging data:

⇒ Press 1x --> data storage unit is erased and logging starts at the selected logging interval



Data storage is active

### Select operating mode

Depending on the last set operating mode, one of the two operating modes appears:

#### Display mode (rAtE: off)

Device shut down; data storage deactivated (see p. 11, chap. 6.3)



If "auto off" appears, the device will automatically shut down in 20 s.



If "cont" appears, the device is in continuous operation.

#### Storage mode (rAtE: on)

Device shut down; data storage activated (see p. 11, chap. 6.3)



If "auto off" appears, the device will automatically shut down in 20 s.



If no keys are pressed, the device will switch into auto-off mode in 4 seconds.




The current applied pressure appears in the display. Measurement values are stored according to the configured storage interval.

## 6.2 Storing Data

### Deleting data

Device shut down; data storage activated (see p. 11, chap. 6.3)




If "auto off" appears, the device will automatically shut down in 20 s.

If a key is pressed, the contents of the data storage unit will be erased.



⇒ If no keys are pressed, the device will switch into auto-off mode in 4 seconds

### Store data




The current applied pressure appears in the display. Measurement values are stored according to the configured storage interval.

The device will stay on until it is manually shut down.

### Quit storage mode


Storage stops as soon as the storage unit is full (max. of 2,000 measurement values) or the device is shut down.



⇒ Double keystroke: device switches into auto-off mode and will shut down automatically in approximately 10 s.

### Setting the storage rate

In order to configure the storage interval, the device's configuration mode must be activated.



**Condition:** Measurement device is shut down!  
 ⇒ Hold down the mode key of the shut-down device for approximately 5 seconds until the "rATE" display appears. 5 s later, the current storage interval configuration will appear in the display. This can be changed using the mode key.


If no key is pressed within 10 s, the device will switch into "auto-off" mode and the currently configured storage interval will remain unchanged.



If "off" is displayed, the internal data storage is switched off.




Measurement values are stored every 1.0 seconds. Other storage intervals: 2s, 10s, 1 min, 10 min



If "trig" appears, new measurement values will only be stored if the current value differs from the last stored value by at least 2 digits (e.g.: 2.3 ... 2.5). This reduces the data volume and optimally utilizes the storage unit.


### 6.3 Choose unit

In order to configure the measurement unit, the device must be switched into configuration mode. Hold down the mode key of the shut-down device until the "rAtE" display appears.



**Condition:** Measurement device is shut down!


⇒ Hold down the mode key of the shut-down device for approximately 5 seconds until the "rAtE" display appears.



⇒ Press the mode key repeatedly until the "unit" display appears.



5 s later, the current measurement unit configuration will appear in the display:




⇒ Within 10 s, select "mbar," "Torr," or "hPa" using the mode key.

## 6.4 TPG 202 calibration

### Atmosphere (CALH)

The device is calibrated ex works. Use under other climate conditions, extreme temperature fluctuations, weathering, or dirt may necessitate readjustment. Conduct zero-point adjustment at the same ambient temperature at which the device is typically operated. Also hold down the mode key of the shut-down device until the "rAtE" display appears.



⇒ Press the mode key repeatedly until the "CAL" display appears.



"CAL.H" will appear in the display in 5s.

⇒ Confirm the "CAL.H" display by pressing the mode key.



The actual atmosphere pressure is displayed.

⇒ Confirm with mode key the display "CAL.H".



⇒ Adjust the reference value with the mode key.

The display value changes by 1 digit (1 mbar) up or down.

If no keys are pressed adjustment is carried out in 5s.



"CALI" will appear in the display during the calibration procedure (approx. 20s). No calibration is performed, if during calibration the error message "Err" appears.



#### Adjustment on atmospheric pressure

The pressure measured with the unit must be above 800 hPa for adjusting. Otherwise adjustment is denied and the error message "Err" displayed.

→ Pay attention to the necessary pressure, when adjusting.


### High vacuum (CAL.L)



#### Adjustment on zero pressure


For adjustment on zero pressure the actual pressure inside the sensor has to be less than  $1 \times 10^{-4}$  hPa. The pressure reading must be less than  $4 \times 10^{-2}$  hPa. Otherwise adjustment is denied and the error message "Err" displayed.

→ Pay attention to the necessary pressure, when adjusting.




**Condition:** Measurement device is shut down!

⇒ Hold down the mode key of the shut-down device for approximately 5 seconds until the "rAtE" display appears.




⇒ Press the mode key repeatedly until the "CAL" display appears.

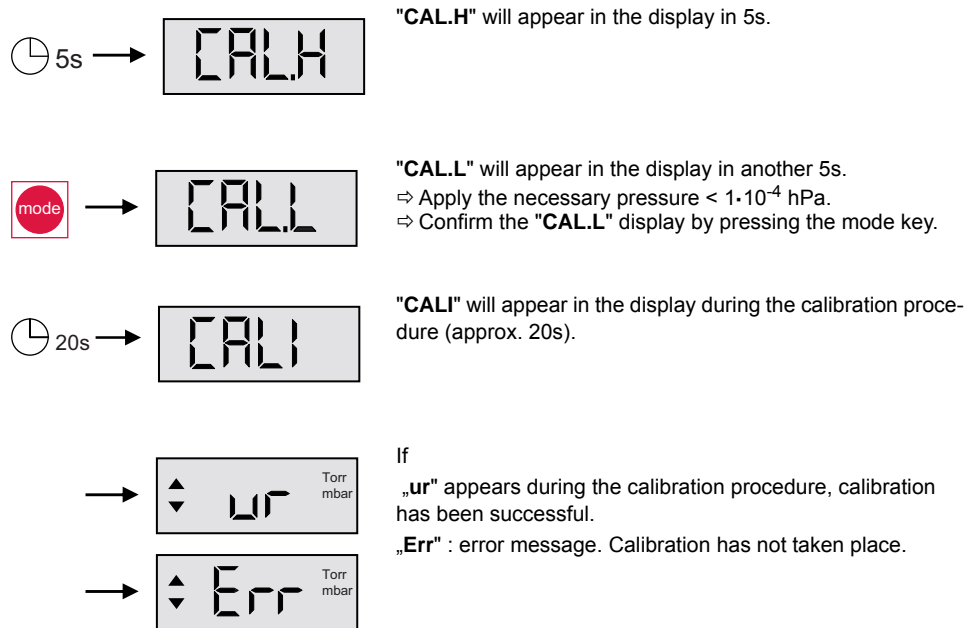

## 6.5 PC mode

The TPG 202 can be connected to the PC via a USB port in order to transmit the measurement data. The DokuStar software (accessory) supports recording current pressure values (online measurement) as well as reading out the measurement value storage unit. The measurement values are represented as a diagram and can be exported as a text file for further analysis.

All the device parameters such as the storage interval, display unit, or the gas type correction factor can also be easily configured using the software.

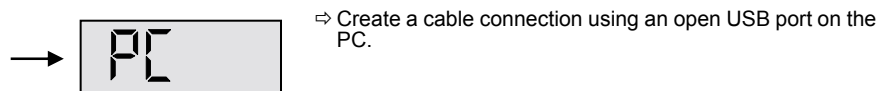

The device will switch into PC mode and is ready for bidirectional data transmission. Communication takes place in accordance with PV protocol (see p. 16, chap. 6.7).



### PC mode!

If the TPG 202 switches into PC mode, the current measurement value display as well as any data logging that may be running will close.

- After the USB cable is disconnected, the TPG 202 will switch into auto-off mode.
- Starting data storage after disconnecting from the PC in accordance with (see p. 10, chap. 6.2)

## 6.6 Configuring the data exchange

Communication is carried out via the USB interface using the Pfeiffer Vacuum protocol:

- 9600 baud
- 8 data bits
- 1 stop bit
- no parity

### Parameter overview

#	Name	Data type	Application
<b>303</b>	Current error code	4 - string	Read-only
<b>312</b>	Software version	4 - string	Read-only
<b>349</b>	Device name	4 - string	Read-only
<b>643</b>	Physical unit	7 - u_short_int	Readable, writable
<b>740</b>	Pressure value in [hPa]	10 - u_expo_new	Readable
<b>742</b>	(Pirani) correction factor	2 - u_real	Readable, writable
<b>770</b>	Data logging interval	1 - pos. integer number	Readable, writable
<b>771</b>	Data logging record	11 - symbol chain	Read-only

Parameters are displayed in square brackets as a three-digit number in bold font. The designation may also be stated if necessary.

Example: **[P:312] Software version**

### Applied data types

Data type	Description	Size 11 - 10	Example
0 - boolean_old	Boolean value (false / true)	06	000000 / 111111
1 - u_integer	Positive integer number	06	000000 to 999999
2 - u_real	Positive fixed point number	06	001571 equal to 15.71
4 - string	String	06	TC_400
6 - boolean_new	Boolean value (false / true)	01	0 / 1
7 - u_short_int	Positive integer number	03	000 to 999
10 - u_expo_new	Positive exponential number	06	100023
11 - string	String	16	BrezelBier&Wurst

### Reading the actual pressure value [P:740]

Pressure value as the value to be queried are transmitted by means of a string in the format "aaaabb", whereby "aaaa" is the mantissa and "bb" the exponent with offset 20 of an exponential number. "aaaa" is therefore in the range "1000" (for 1.000) to "9999" (for 9.999). The individual characters of the string are the numbers "0" (ASCII 48) to "9" (ASCII 57).

**Example:** "100023" represents  $1.000 \times 10^{+3}$  mbar, "750015" represents  $7.500 \times 10^{-5}$  mbar.

### Writing the unit [P:643]

The unit for representing the **pressure value in the display** can be selected manually using the mode key or via the interface. This does not impact the unit of the transmitted pressure values: these are always given in hPa.

### Reading error codes [P:303]

Parameter 303 transfers the actual error code of the unit. The following error codes can occur:

Value	CPT 200	PPT 200	RPT 200	HPT 200	MPT 200	Meaning
000000	X	X	X	X	X	No error
Wrm001				X		Filament 1 defective in auto-mode
Err001	X	X	X	X	X	Defective gauge
Err002	X	X	X	X	X	Defective memory
Err003				X		Filament 1 defective
Err004				X		Filament 2 defective

Value	CPT 200	PPT 200	RPT 200	HPT 200	MPT 200	Meaning
Err005				X		Both filaments defective

**Reading the component names [P:349]**

Parameter 349 contains a token of the component name:

- TPG 202

**Reading the software version [P:312]**

The software version can be read from the connected device using parameter 312:

- Example: 010102

**Reading/writing the gas correction factor [P:742]**

The correction factor can be set to values in the range 0.2–8.0 :

- Example: 1,00 (written as 000100)

**Read/write the storage interval [P:770]**

The following storage intervals can be selected using parameter [P:770]:

- OFF, 1s, 2s, 10s, 60s, 600s, trig interval in [s]

Additionally, storage intervals ranging from 0 (off) to 9999 can be configured via the USB port using the PV protocol.

**Reading data from memory [P:771]**

The stored values (max. of 2,000) can be read from the TPG 202 using parameter [P:771]:

- Data format: 00mmmeettttttt
  - mmmmee: Measurement value in data format u\_expo\_new, data = m.mmm x 10 ^ (ee - 20)
  - tttttt: Time of the logging in s since the beginning
  - Logging not/no longer available: 9999999999999999

**Caution:** In order to increase the energy efficiency of the operating system, delayed response times of up to 0.5 seconds are possible.

## 6.7 Pfeiffer Vacuum Protocol for "USB"

### Telegram frame

The telegram frame of the Pfeiffer Vacuum protocol contains only ASCII code characters [32; 127], the exception being the end character of the message  $C_R$ . Basically, a master  $\square$  (e.g. a PC) sends a telegram, which is answered by a slave  $\circ$  (e.g. electronic drive unit or gauge).

a2	a1	a0	*	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
a2 - a0		Unit address for slave $\circ$ – Individual address of the unit ["001"]														
*		Action														
n2 - n0		Pfeiffer Vacuum parameter numbers														
l1 - l0		Data length dn ... d0														
dn - d0		Data in data type concerned														
c2 - c0		Checksum (sum of ASCII values of cells a2 to d0) modulo 256														
$C_R$		Carriage return (ASCII 13)														

### Telegrams

#### Data request $\square \Rightarrow \circ ?$

a2	a1	a0	0	0	n2	n1	n0	0	2	=	?	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	---	---	---	---	----	----	----	-------

#### Control command $\square \Rightarrow \circ !$

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

#### Data response / control command understood $\circ \Rightarrow \square \checkmark$

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	$C_R$
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

#### Error message $\circ \Rightarrow \square *$

a2	a1	a0	1	0	n2	n1	n0	0	6	N	O	_	D	E	F	c2	c1	c0	$C_R$
										_	R	A	N	G	E				
										_	L	O	G	I	C				

NO_DEF	The parameter n2 - n0 does not exist
_RANGE	Data dn - d0 are outside the permitted range
_LOGIC	Logic access violation

### Telegram examples

#### Read actual pressure value (data query)

(Parameter [P:740], Slave device address: "001")

$\square \Rightarrow \circ ?$	0	0	1	0	0	7	4	0	0	2	=	?	1	0	6	$C_R$			
ASCII	48	48	49	48	48	55	52	48	48	50	61	63	49	48	54	13			
$\circ \Rightarrow \square \checkmark$	0	0	1	1	0	7	4	0	0	6	1	0	0	2	3	0	2	5	$C_R$
ASCII	48	48	49	49	48	55	52	48	48	54	49	48	48	50	51	48	50	53	13

## 7 Maintenance

The unit requires no maintenance. A damp cloth can be used to wipe away any external dirt.



## 8 Troubleshooting

Problem	Possible cause	Correction
Measurement value deviation too high	Aging, contamination, extreme temperatures, wrong adjustment	Readjustment
Display "or"	Measurement range exceeded	(Pressure > 1200 hPa)
Display "ur"	Measurement range fallen below	(Pressure < $5 \times 10^{-4}$ hPa)
Error message "Err"	Adjustment performed with wrong pressure	Displayed pressure must be for atmospheric pressure > 800 hPa, for zero compensation < $4 \times 10^{-2}$ hPa
	Measurement value deviation exceeds the adjustment range	Send in the device
Error message "Err1"	Sensor defective	Send in the device

## 9 Service

Do make use of the Pfeiffer Vacuum service facilities. In the event that repairs are necessary a number of options are available to ensure any system down time is kept to minimum:

- Repair in the nearby Service center
- Send unit and have it replaced with a new unit

### **Sending of units (Service Request)**

For a quick and smooth handling of the service process, Pfeiffer Vacuum recommends the following steps:

- ➔ Download the forms "Service Request" and "Declaration on Contamination".<sup>1)</sup>
- ➔ Fill out the "Service Request" form and send it by fax or e-mail to your local Pfeiffer Vacuum service contact.
- ➔ Include the confirmation on the "Service Request" from Pfeiffer Vacuum with your shipment.
- ➔ Fill out the "Declaration of Contamination" and include it in the shipment. This document is mandatory to protect our service engineers.
  - Fill out and send one declaration for each device.
- ➔ If possible, send unit in the original packaging.

In the absence or incompleteness of the "Declaration on Contamination" and/or the use of unsuitable transport packaging, Pfeiffer Vacuum reserves the right to make a decontamination and/or to send the product back at the shipper's expense.

### **Service orders**

All service orders are carried out exclusively according to our repair conditions for vacuum units and components. Detailed information, addresses and forms at:

<http://www.pfeiffer-vacuum.com/service/repair-services/container>.

## 10 Accessories

Designation	TPG 202
Accessories kit with AC adapter, battery, USB cable, DokuStar software	PT 350 102 -T


<sup>1)</sup> Forms under [www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com)

# 11 Technical data and dimensions

## 11.1 Technical data

Parameter	TPG 202
Nominal diameter	DN 16 ISO-KF
Protection category	IP 40
Battery type	9 V AlMn E bloc, 6 LR6; 9 V Lithium E bloc
Seal	Metal
Pressure max.	2000 hPa
Accuracy	1200 - 10 hPa: 0,3 % Full Scale; 10 - $2 \cdot 10^{-3}$ hPa: 10 %; $\leq 2 \cdot 10^{-3}$ hPa: < factor 2 of reading
Weight	0.230 (battery included) kg
Materials in contact with media	Stainless steel, gold, nickel, tungsten, glass, FPM
Measurement range max.	1200 hPa
Measurement range min.	$5 \cdot 10^{-4}$ hPa
Method of measurement	Piezo/Pirani
Temperature: Operating	5-50 °C
Temperature: Storage	-20 - +60 °C

## 11.2 Dimensions

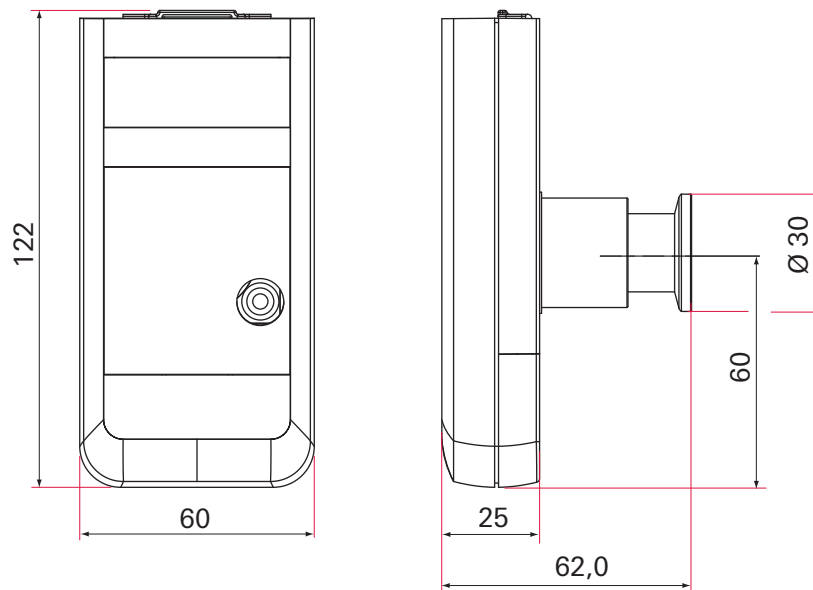

### 11.3 Gas correction factor

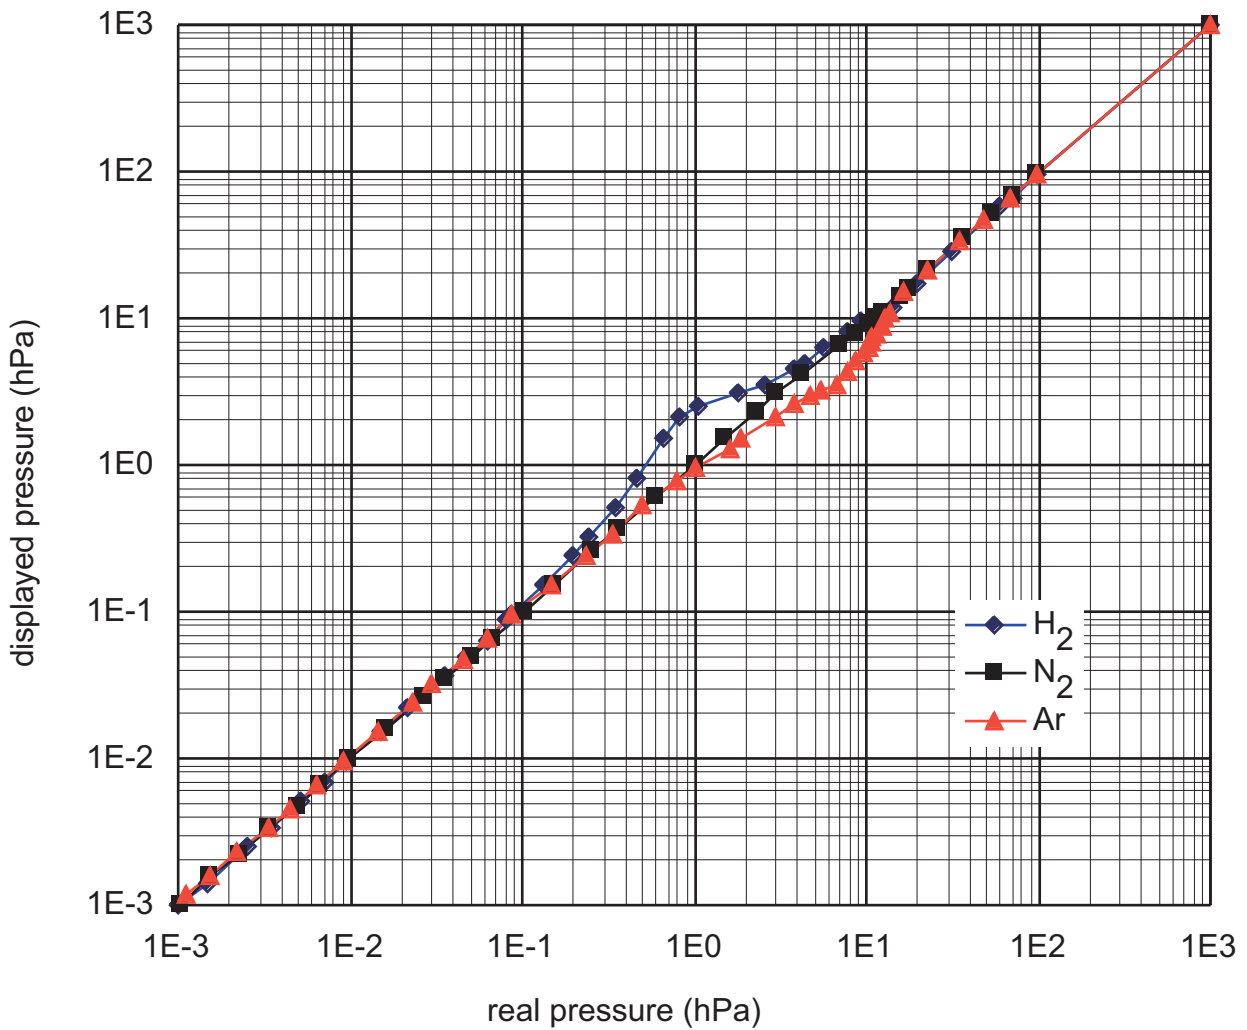


Fig. 3: Dependent on gas type TPG 202 (Pirani)

Pirani correction factor ( for pressures $<1 \cdot 10^{-1}$ hPa)	
N <sub>2</sub>	1.00
Air	1.00
H <sub>2</sub>	0.58
He	1.02
Ar	1.59
CO <sub>2</sub>	0.89



# Declaration of conformity

We hereby declare that the product cited below satisfies all relevant provisions according to the following **EC directives**:

- **Electromagnetic Compatibility 2014/30/EU**
- **Restriction of the use of certain Hazardous Substances 2011/65/EU**

**DigiLine**  
**TPG 202**

Harmonised standards and national standards and specifications which have been applied:

EN 61326-1: 2013 Group 1 / Class B  
EN 50581: 2012

Signature:

Pfeiffer Vacuum GmbH  
Berliner Straße 43  
35614 Asslar  
Germany

---

(Dr. Ulrich von Hülsen)  
Managing Director

Asslar, 2017-11-13

## **VACUUM SOLUTIONS FROM A SINGLE SOURCE**

Pfeiffer Vacuum stands for innovative and custom vacuum solutions worldwide, technological perfection, competent advice and reliable service.

## **COMPLETE RANGE OF PRODUCTS**

From a single component to complex systems:

We are the only supplier of vacuum technology that provides a complete product portfolio.

## **COMPETENCE IN THEORY AND PRACTICE**

Benefit from our know-how and our portfolio of training opportunities!

We support you with your plant layout and provide first-class on-site service worldwide.

Are you looking for a  
perfect vacuum solution?  
Please contact us:

**Pfeiffer Vacuum GmbH**  
Headquarters • Germany  
T +49 6441 802-0  
info@pfeiffer-vacuum.de

[www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com)

**PFEIFFER**  **VACUUM**